

S.O.S. | MESSAGE | TRACK | CHECK IN | SOCIAL

SPOT X USER GUIDE



TABLE OF CONTENTS

WELCOME

What's in the Box.....	1
------------------------	---

ACTIVATING YOUR SPOT X

Electronic Serial Number (ESN), Authorization Code and Mobile Device Number (MDN).....	1
Activating Your SPOT X and Selecting a Service Plan.....	1
SPOT X Firmware Update Required.....	1

SPOT X AT A GLANCE

Device Overview	2
Main Menu Actions.....	2
Device Overview Functions	3
Status Bar Icons	4
Menu Display Icons	4
SPOT X Directional Pad	5
Screen Lock.....	5
Keyboard and Display Backlighting.....	5
Charging your SPOT X	5

GETTING STARTED

Important SPOT X Tips.....	6
SPOT X Operating Temperatures.....	6

CONTACTS

Manually Adding a Contact.....	7
Deleting a Contact	8

2-WAY MESSAGING

Creating & Sending Messages	9
Predefined Messages	10
Social Media	10
Viewing All Messages.....	10
Viewing Individual Messages.....	11
Deleting Individual Message Threads	11
Replying to a Message.....	11

CHECK IN

Sending a Check In Message	12
How to View Your Sent Check In Messages	12
Cancel Messages	12

SPOT S.O.V. (SAVE OUR VEHICLE)

Initiating SPOT S.O.V.	13
-----------------------------	----

S.O.S.

Initiating S.O.S.	14
Canceling S.O.S.	15

TRACKING

Select Tracking Interval.....	16
Initiating Tracking.....	16
Canceling Tracking	17
Suspended Tracking Mode.....	17

MESSAGE FETCHING

Selecting a Message Fetching Rate	18
Manually Fetching New Messages.....	18

NAVIGATION

Calibrating the Compass	19
Trip Information Data Fields.....	20
Configuring Trip Information Data Fields	20

WAYPOINTS

Creating a Waypoint.....	21
Navigating to a Waypoint	21

SYSTEM SETTINGS

Viewing Data Usage	22
Viewing Service Plan Details	22
Language Settings	23
Time and Date Settings	23

Distance Unit Settings	24
Display Settings	24
SPOT X Information	24
Restore Factory Settings	24
Demo/Retail Mode	24
Regulatory Information	24
Enable/Disable Screen S.O.S.	24

SPOT MY ACCOUNT

My Account Overview	25
---------------------------	----

MY ACCOUNT – MY DEVICES

SPOT X My Devices Overview	26
----------------------------------	----

MY ACCOUNT - DEVICE NAME TAB

Personalize the Device Name	28
-----------------------------------	----

MY ACCOUNT – TRACKING TAB

Tracking	29
----------------	----

MY ACCOUNT – MOVEMENT ALERT TAB

Configuring Movement Alerts	30
-----------------------------------	----

MY ACCOUNT – THIRD PARTY GPS FORWARDING TAB

Enter a Third Party Identification Code	31
-----------------------------------------------	----

MY ACCOUNT – DUPLICATE SETTINGS TAB

Copy Device Setting to Another SPOT X	32
---------------------------------------------	----

MY ACCOUNT – S.O.S. TAB

Enter the Primary and Secondary Emergency Contacts	33
----------------------------------------------------------	----

MY ACCOUNT – CONTACTS TAB

Create New Contact	34
Create New Contact Group	34
Adding Contacts to the SPOT X	34
Delete Contacts	35

MY ACCOUNT – SPOT S.O.V. TAB

SPOT S.O.V. (Save Our Vehicle)	36
SPOT S.O.V. Assist Features.....	36

MY ACCOUNT – SOCIAL MEDIA TAB

Twitter.....	37
--------------	----

MY ACCOUNT – MESSAGE BLOCKER TAB

Selecting a Blocking Mode	38
Add to the Blacklist	38
Add to the Whitelist	38
Delete from the Blacklist	39
Delete from Whitelist	39

MY ACCOUNT – PREDEFINED MESSAGES TAB

Creating a Predefined Message	40
Deleting a Predefined Message	40
Editing a Predefined Message	41
Syncing Predefined Messages to the SPOT X	41

MY ACCOUNT – CHECK IN TAB

Configuring the Check In Message	42
Editing an Email Address or Mobile Number	43
Deleting an Email Address or Mobile Number	43

MY ACCOUNT – UNDELIVERED MESSAGE NOTIFICATION TAB

Enable or Disable Undelivered Message Notification	44
----------------------------------------------------------	----

MY ACCOUNT – WAYPOINTS TAB

Creating a Waypoint	45
Deleting a Waypoint	45
Editing a Waypoint	45
Syncing Waypoints to the SPOT X	45

MY ACCOUNT – MY LOCATIONS

Tracking	46
Set Filters	47
Locate	48

MY ACCOUNT – SHARE & GET SPOTTED PAGES

Create a Share Page	49
Create a Get Spotted Page	50

MY ACCOUNT – SETTINGS AND BILLING

Settings & Billing Overview	51
SPOT X Message Usage	52

SYNCHING AND UPDATING FIRMWARE WITH MY ACCOUNT

Synching SPOT X	53
SPOT X Firmware Update	53

SPOT X SPECIFICATIONS

SPOT X Specifications	55
-----------------------------	----

CERTIFICATIONS

FCC Compliance Statement	55
FCC Regulatory	55
Réglementation de la FCC.....	55
ISED RSS-GEN Notice	55
Industry Canada Regulatory.....	56
Canada Regulatory	56
Réglementation du Canada	56
Declaration of Conformity for European Customers.....	56

GENERAL WARNINGS

General Warnings.....	57
-----------------------	----

WELCOME

Thank you for purchasing your **SPOT X**. Now you can stay connected to family, friends and Search & Rescue services whenever you're off the grid.


WHAT'S IN THE BOX?

- SPOT X Device
- Strap and Carabiner
- 18" Micro USB Data/Power Cable
- AC (Wall) Power Adapter
- Quick Start Guide
- Warranty Card
- GEOS Reference Guide
- S.O.S. Mirrored Sticker

IMPORTANT: YOUR SPOT X REQUIRES AN ACTIVE SPOT SERVICE PLAN SUBSCRIPTION TO COMMUNICATE. SPOT X FEATURES, INCLUDING **S.O.S.**, **WILL NOT WORK WITHOUT FIRST ACTIVATING YOUR DEVICE.**

IF YOU ENCOUNTER ISSUES DURING ACTIVATION, PLEASE VISIT
FINDMESPOT.COM/SPOTXSUPPORT FOR ASSISTANCE.

ELECTRONIC SERIAL NUMBER (ESN), AUTHORIZATION CODE AND MOBILE DEVICE NUMBER (MDN)

The ESN and Authorization Code can be found on the SPOT X device by selecting **System Settings**  and scrolling to and selecting **SPOT X Info**. The ESN can also be found on the bottom of your SPOT X retail box. You will need both codes when setting up your SPOT MY ACCOUNT.

Your MDN will be assigned after you complete the SPOT MY ACCOUNT activation process.

ACTIVATING YOUR SPOT X AND SELECTING A SERVICE PLAN

1. Go to **FindMeSPOT.com/Activate**
2. New SPOT customers should select **Begin Activation** to create a new account. Existing SPOT customers should login to their current SPOT account and select **Add New SPOT Device**.
3. Follow the onscreen instructions to create account, choose a service plan and additional services for your SPOT X. Confirm your order to finish the SPOT MY ACCOUNT activation process.

SPOT X FIRMWARE UPDATE REQUIRED

ONCE YOU COMPLETE THE **SPOT MY ACCOUNT** ACTIVATION, MAKE SURE YOUR DEVICE IS UPDATED WITH THE LATEST FIRMWARE. SYNCING SPOT X WITH YOUR SPOT MY ACCOUNT WILL BE REQUIRED FOR SEVERAL FEATURES SUCH AS CONTACTS AND PREDEFINED MESSAGES TO APPEAR ON YOUR DEVICE.

VISIT **FINDMESPOT.COM/FIRMWARE** TO DOWNLOAD THE LATEST SPOT X FIRMWARE UPDATER.

SPOT X AT A GLANCE

DEVICE OVERVIEW

- 1 Power/Backlight Button
- 2 Power LED
- 3 Display Screen
- 4 S.O.S. Button
- 5 Directional Pad
- 6 Track Button
- 7 Back Button
- 8 QWERTY Keyboard
- 9 USB Power/Data Port



MAIN MENU ACTIONS




- 1 Opens Messages Screen
- 2 Sends Check In Message
- 3 Posts to Social
- 4 Fetches New Messages
- 5 Opens Tracking Screen
- 6 Opens Navigation Screen
- 7 Opens System Settings
- 8 Initiates S.O.S. with GEOS IERCC

DEVICE OVERVIEW FUNCTIONS

	BLINKING GREEN	BLINKING RED	NO LED
POWER LED	SPOT X is powered on and battery life is above 20%.	SPOT X is powered on and battery life is below 20%.	SPOT X has either entered power saving mode due to no button press or the unit is powered off.
POWER BUTTON	Press the Power button to power on the SPOT X. Long press the Power button for 3 seconds to power OFF.		While the SPOT X is powered ON, quick press the Power button to toggle the screen and keyboard backlight on and off.
S.O.S. BUTTON	Long press the S.O.S. button for 3 seconds or until S.O.S. screen is displayed to initiate an S.O.S. with GEOS IERCC.		While S.O.S. is active, long press the S.O.S. button for 3 seconds to cancel the S.O.S. with GEOS IERCC.
TRACKING BUTTON	Long press the Track button for 3 seconds to initiate tracking mode at your set interval rate.		While Tracking Mode is active, long press the Track button for 3 seconds to cancel Tracking.
DIRECTIONAL PAD	Press up, down, left and right to navigate to and highlight a section on the screen.		Press the center button to make a selection.
BACK BUTTON	Quick press the Back button to navigate to the previous screen.		Press and hold the Back button to go back to the Main Menu screen.
QWERTY KEYPAD	Use the keyboard to create messages, contact names and other manual entries as required.		
DISPLAY SCREEN	The SPOT X Display screen allows for interaction with the Main Menu, sub-menus, and other onscreen features.		
USB POWER/DATA PORT	Used to connect a Micro USB Cable to the SPOT X USB Port to charge the SPOT X device and to sync with SPOT MY ACCOUNT .		

STATUS BAR ICONS

BATTERY

-  Battery Strength
-  Low Battery
-  Battery Charging






GPS SIGNAL

-  GPS Signal Available
-  GPS Signal Unavailable




DEVICE

-  Sync Required

MESSAGES

-  Sending a Message
-  New Received Messages
-  Fetching New Messages
-  Pending Queued Messages
-  Sending Check In Message

MODES





- s.o.s.** S.O.S. Active
-  Social
-  Tracking Active
-  Suspended Tracking

TIME

- 5:00 PM** 12-Hour Format
- 17:00** 24-Hour Format

MENU DISPLAY ICONS





MESSAGES

-  Create New Message
-  Send Message
-  Reply to Message
-  Predefined Messages

CONTACTS

-  Contact List
-  Create New Contact





GPS

-  Include Elevation with Message
-  Include GPS Coordinates with Message
-  Create New Waypoint
-  Navigate to Location





OTHER

-  Delete
-  Save
-  Back

CONTACTS

-  Email Contact
-  Mobile Contact
-  Group Contact
-  Twitter


SENT MESSAGE STATUS

-  Message Sent
-  Message Failed
-  Message Sent to Queue
-  Message Sent - Delivery Unconfirmed

SPOT X DIRECTIONAL PAD

The SPOT X Main Menu screen displays icons/buttons that you can select to send messages, activate an S.O.S. and manage other features. After making an initial selection, sub-menu screens may be displayed.


Use the Directional Pad (Up – Down – Left – Right) to highlight your selection and then press the **Select** button to make your selection. Use the Back button to cancel or go back to the previous screen.

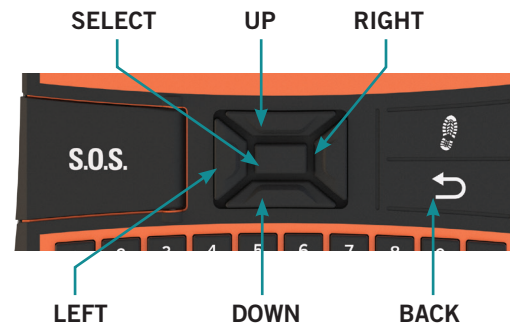

SCREEN LOCK

To prevent the accidental transmission of data, you can enable the screen lock feature on the SPOT X.

Simply press the **↑** key followed by the **Select** button. To disable the screen lock, press the **↑** key followed by the **Select** button.

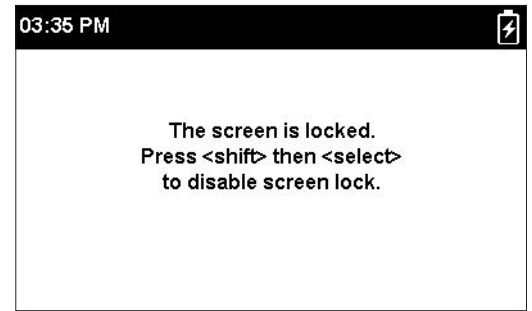


KEYBOARD AND DISPLAY BACKLIGHTING

Press the **Power/Backlight Button** to turn on/off keyboard and screen illumination.

CHARGING YOUR SPOT X

Connect the Micro USB Data/Power Cable to the SPOT X USB Data/Power Port and connect to either a computer or the AC Power Adapter. The battery with the lightning bolt icon will be visible while charging.


Once the battery icon indicates a full charge, disconnect the Power Cable from the SPOT X. Make sure the USB cover is firmly sealed to ensure the device's waterproof capability.

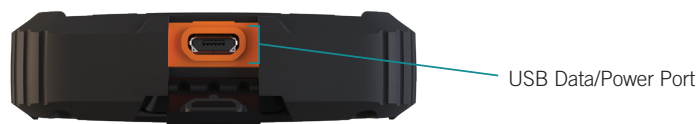


GETTING STARTED

IMPORTANT SPOT X TIPS

- ▶ SPOT X needs a clear view of the sky with no obstructions (buildings, roof overhangs, trees, etc.) to obtain a GPS signal to provide the most accurate location information and send messages (Figure 1). SPOT X is not as reliable at the bottom of a deep canyon, in a cave, or in very dense woods.

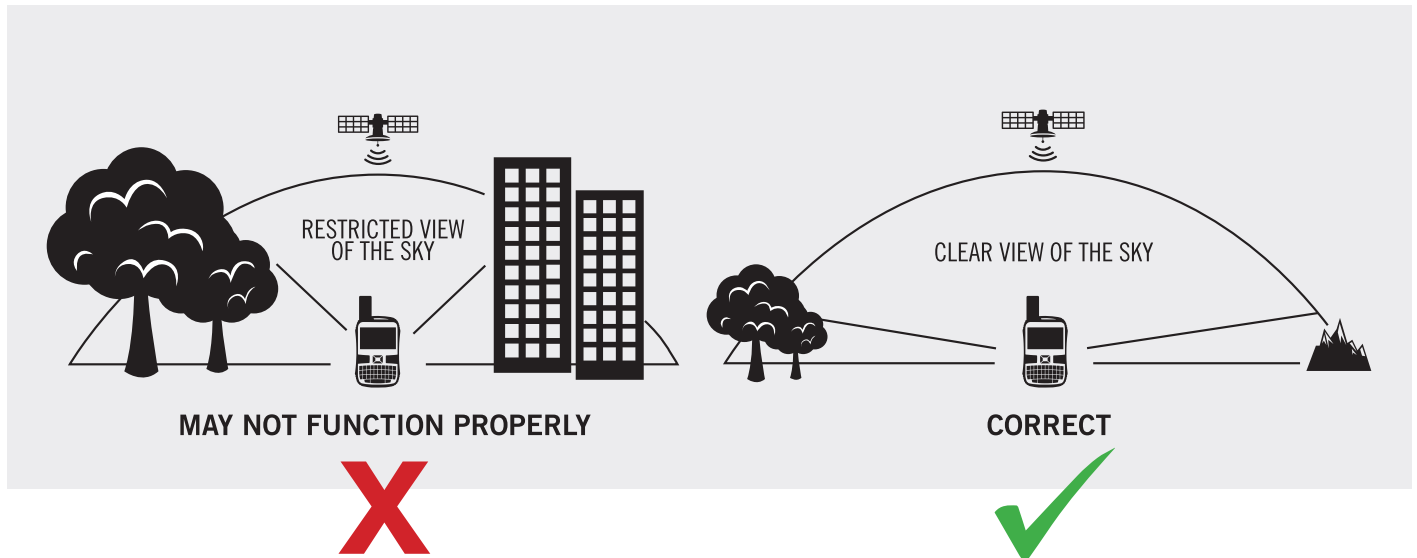

- ▶ Orienting SPOT X vertically with the **antenna facing towards the sky**, will improve performance due to the antenna being located on the top portion of the device.
- ▶ Since SPOT X has the ability to receive messages, messages sent from the device can be acknowledged shortening the transmission time.
- ▶ Before heading off the grid, we strongly recommend that you send a test text message to ensure your device was activated properly. You can view your sent messages in your account at FindMeSPOT.com/MyAccount

NOTE: If no GPS signal is found the  will display on the screen. If possible, you should move to a location with a clearer view of the sky. You can check the status of your messages in the message thread.




SPOT X OPERATING TEMPERATURES

Prolonged use or storage of your SPOT X in direct sunlight or in a vehicle may cause the device to overheat and/or damage its battery. SPOT X can withstand operating in temperatures of -4F to +140F (-20C to +60C).





CONTACTS

SPOT X can hold up to 70 contacts and/or contact groups. Individual contacts can either be manually added to or deleted from the SPOT X on the fly or they can be input via **SPOT My Account** and synced to the SPOT X by using the **SPOT X Firmware Updater**.


Contacts supported:




-  Mobile Number
-  Email
-  Contact Groups


MANUALLY ADDING A CONTACT

1. On the **Main Menu** screen, select  and press the **Select** button to display the **Messages** screen, then select **Contacts**.
2. On the Contacts screen, scroll down until the  is highlighted or press the right button from the directional pad and highlight the . Then press the **Select** button to display the **New Contact** screen.
3. Enter the appropriate information and select  and press **Select** button to save the contact to your SPOT X device.

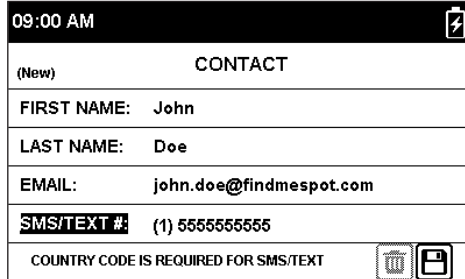If both **Email** and **Text #** fields are filled in, the SPOT X will create two separate contacts, one for the email and one for the text number.





09:00 AM	
(New)	CONTACT
FIRST NAME:	John
LAST NAME:	Doe
EMAIL:	john.doe@findmespot.com
SMS/TEXT #:	(1) 5555555555
COUNTRY CODE IS REQUIRED FOR SMS/TEXT  	


4. Additionally, there will be  displayed next to the new contact's name indicating that the SPOT X will need to sync with **SPOT My Account**.



09:03 AM		
CONTACTS		
 John Doe		
 John Doe		
1/2 		

DELETING A CONTACT

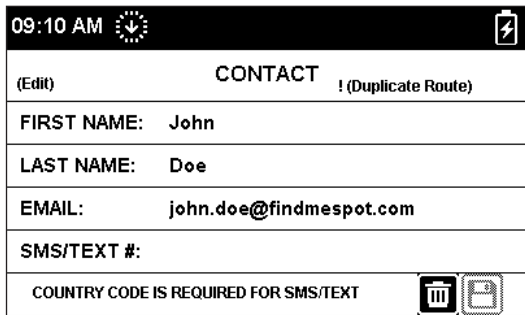


1. On the Main Menu screen, select  and then select **Contacts**. Scroll down and highlight the contact you want to delete. Press the **Select** button.
2. Select  to delete the contact and follow the onscreen instructions to remove it from your SPOT X device permanently.
3. Additionally, if the SPOT X device had been previously synced with **SPOT My Account** and the contact was present in both locations, once a new sync is performed the deleted contact will be also removed from the contact list in **SPOT My Account**.







2-WAY MESSAGING




Send and receive 140 character text messages and emails with family and friends from virtually anywhere in the world. SPOT even provides you with your own mobile text number so others can reach you anytime.

CREATING & SENDING MESSAGES

1. On the Main Menu screen, select  to display the Messages screen, and then select Messages.
2. On the Messages screen, select  to compose a new message.
3. Select the To: field to display the Select Contact screen, then select New SMS Contact to input a phone number or New Email Contact to input an email recipient. You can also select  to add up to 10 individual contacts or a contact group from your contact list.

NOTE: When sending a message to more than one person, the contacts will have to be added individually.

4. Select the **MESSAGE:** field to display the New Message screen. From here, you can choose to create a new message or select a message from your list of Predefined Messages by selecting .
5. Include your elevation by checking  and/or include your GPS coordinates by checking .
6. Select  to send your message.

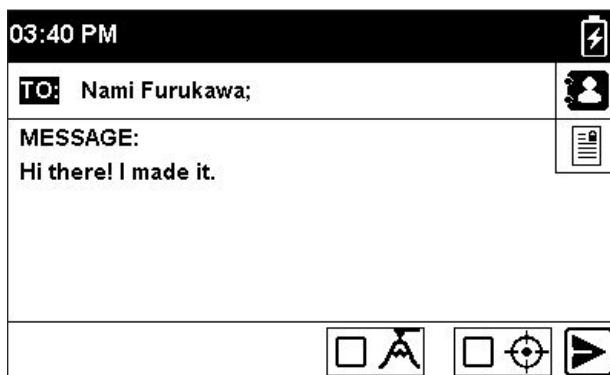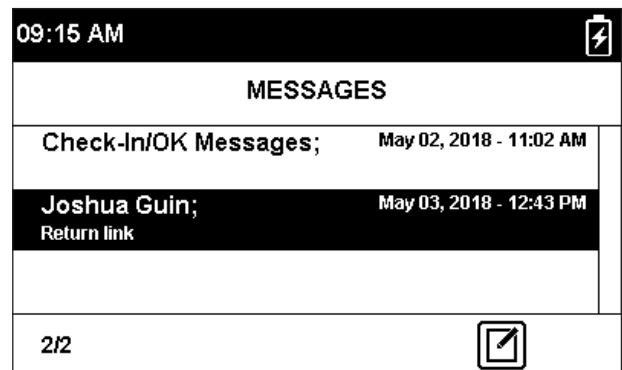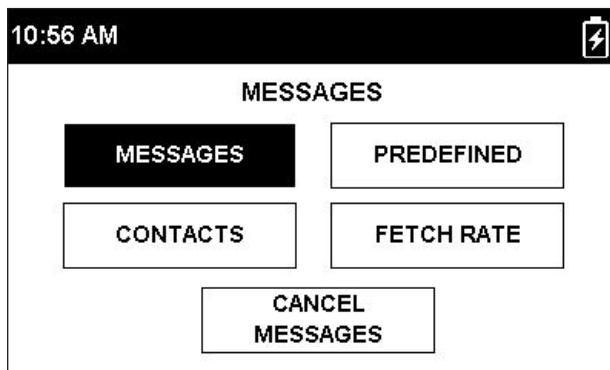

PREDEFINED MESSAGES





Make texting even easier by sending a Predefined Message. Predefined Messages can be created in your **SPOT My Account** and up to 14 can be stored on your SPOT X so you can quickly update your friends and family.

Simply create a new message and select the  to access the Predefined Messages you have created.

Syncing your SPOT X with SPOT My Account is required for the changes to reside on your SPOT X.


SOCIAL MEDIA


Link your **social media** accounts to your SPOT X directly from your **SPOT My Account**. Once you've linked your accounts you will be able to send 140 character updates to those accounts from your SPOT X at any time.

1. On the Main Menu screen, select  then select where to post your message.
2. Select **Next**.
3. You can include your elevation by checking  and/or include your GPS coordinates by checking .
4. Select  to post to social media.

Syncing your SPOT X with SPOT My Account is required for the changes to reside on your SPOT X.


VIEWING ALL MESSAGES

1. On the **Main Menu** screen, select  to display the main Messages screen, then select **Messages** to view all of your message threads.
2. Highlight and select the message thread you wish to open.

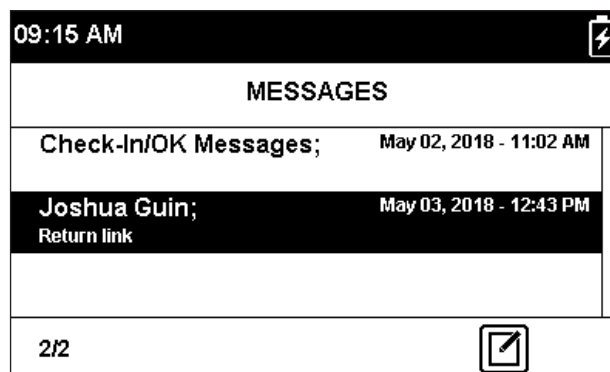

VIEWING INDIVIDUAL MESSAGES

To view the entire message, highlight and select the message you want to see.

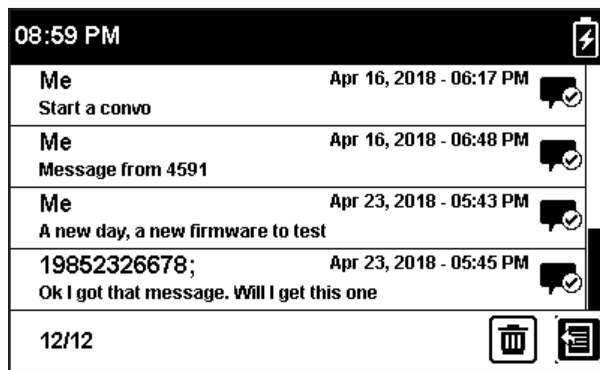

DELETING INDIVIDUAL MESSAGE THREADS

To delete the individual message thread, go to the thread and select  and follow the onscreen instructions.

REPLYING TO A MESSAGE


To reply to the message, go to the thread and select  .


CHECK IN

Check In with friends and family by quickly sending a pre-programmed message and/or email along with your GPS coordinates. The Check In message will include a link to Google Maps™ showing the SPOT X's location. Make sure you set up this feature before you go off the grid.


The Check In message can be customized and assigned to contacts via **SPOT My Account** at any time.

SENDING A CHECK IN MESSAGE


On the Main Menu, select  and the pre-programmed message created in **SPOT My Account** will automatically be sent to the pre-assigned contacts in your Check In contact list.

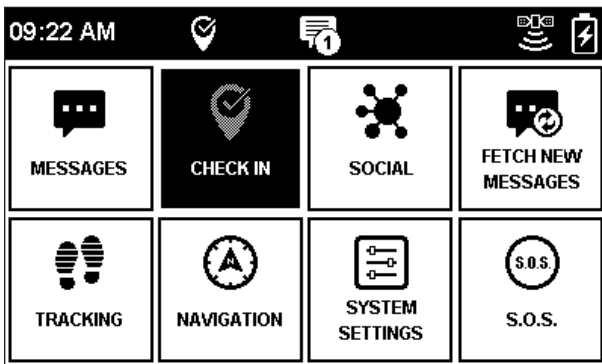

HOW TO VIEW YOUR SENT CHECK IN MESSAGES


1. On the Main Menu screen, select  to display the Message screen, and then select **Messages**.
2. On the list of messages, select the **Check In**.
3. Select the **Check In** message you would like to view.

NOTE: The Check-In Message will not display the texts sent, but only the GPS coordinates and date/time it was sent.

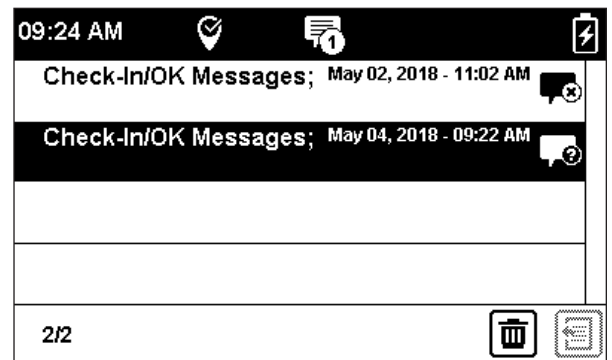

CANCEL MESSAGES

Cancels all outbound Check In and other messages that are queued up.







1. On the Main Menu screen, select  and then select **Cancel Messages**.
2. A message will be displayed asking if you want to cancel all pending outbound messages. Select **Yes** or **No**.







SPOT S.O.V. (SAVE OUR VEHICLE)

SPOT S.O.V. can be used during non-life threatening situations and allows you to send 2-Way text messages to Nation Safe Drivers. SPOT S.O.V. services provided by Nation Safe Drivers, are only available to subscribing customers in the U.S., Puerto Rico, Washington, D.C. and Canada. Visit FindMeSPOT.com/SPOTSOV to learn more.

INITIATING SPOT S.O.V.

If Nation Safe Drivers service was added to the plan, this contact will automatically be listed under the SPOT X contact list.

1. On the **Main Menu** screen select  to display the main Message screen, then select **Messages**.
2. Select .
3. Select .
4. Select **Nation Safe Driver** from your contact list.
5. Select the **Message** field to display the New Text screen. From here you can choose to create a new message. Select Done to continue.
6. Include your Elevation by checking next to  and/or include your GPS Coordinates by checking next .
7. Select  to send your message.


09:01 AM	
TO: Nation Safe Driver;	
MESSAGE: I have a flat tire. Please send a tow truck.	
<input checked="" type="checkbox"/>  <input checked="" type="checkbox"/>  	


S.O.S

IMPORTANT NOTICE: S.O.S. MODE SHOULD ONLY BE USED DURING LIFE THREATENING EMERGENCIES. SENDING FALSE S.O.S. MESSAGES MAY SUBJECT YOU TO LIABILITY FOR ADDITIONAL CHARGES.

Activate the S.O.S. mode to begin communicating and sending alerts directly to GEOS International Emergency Response Coordination Center (IERCC). GEOS IERCC will notify the appropriate emergency responders based on the SPOT X's GPS location and your emergency situation. Responders may include local police, Coast Guard, or Search and Rescue teams. For full details about GEOS IERCC, please visit FindMeSPOT.com/GEOS



INITIATING S.O.S.

1. Power on the SPOT X, lift cover, long press the S.O.S. button for 3 seconds or until S.O.S. screen is displayed, or select  from the Main Menu screen and follow the onscreen instructions.
2. The S.O.S. icon will appear on the **Status Bar** to indicate that S.O.S. has been initiated.

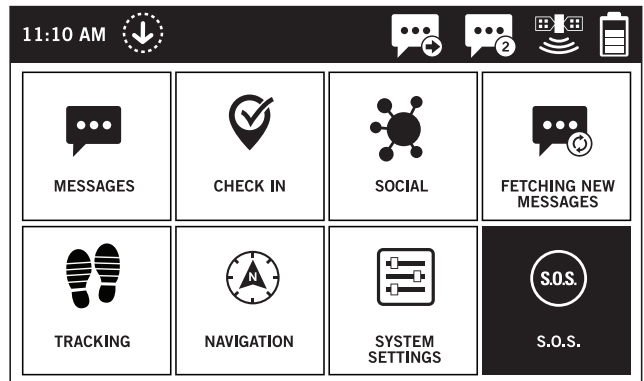

3. Once S.O.S. is initiated, GEOS IERCC will be notified of your emergency and SPOT X will continuously send S.O.S. notifications with your GPS coordinates to GEOS IERCC every 2.5 minutes until S.O.S. is acknowledged. SPOT X will send S.O.S. notification with you GPS coordinates every 5 minutes until canceled.


NOTE: Powering off the SPOT X will cancel the S.O.S.

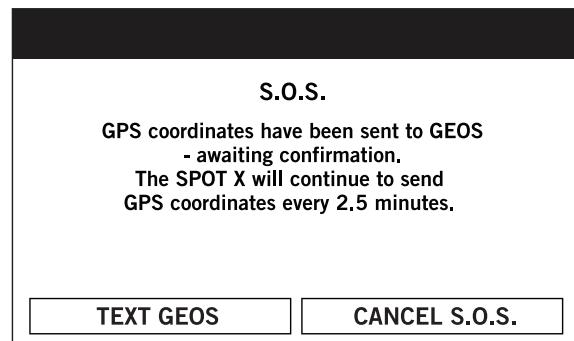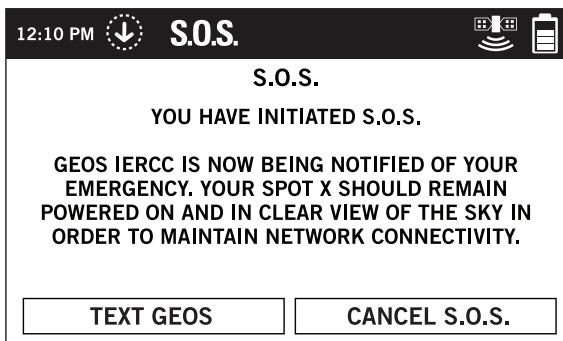

4. SPOT X will then allow you to communicate 2-Way, via message, with GEOS IERCC by selecting the **Text GEOS** button.
5. Upon activating S.O.S., the device will terminate all previously queued messages waiting to be transmitted as well as Navigation, Check In, SPOT S.O.V., and Tracking if active. The SPOT X device will be locked down in S.O.S. Mode and you will not be able to send messages to anyone other than GEOS IERCC until S.O.S. is canceled.
6. While S.O.S. is active, the SPOT X should remain outside in clear view of the sky with no obstructions in order to maintain network connectivity.

CANCELING S.O.S.

Lift the protective S.O.S. cover, long press the S.O.S. button for 3 seconds and follow the onscreen instructions. You can also cancel S.O.S. by selecting the Cancel S.O.S. on the S.O.S. screen and following the onscreen instructions.

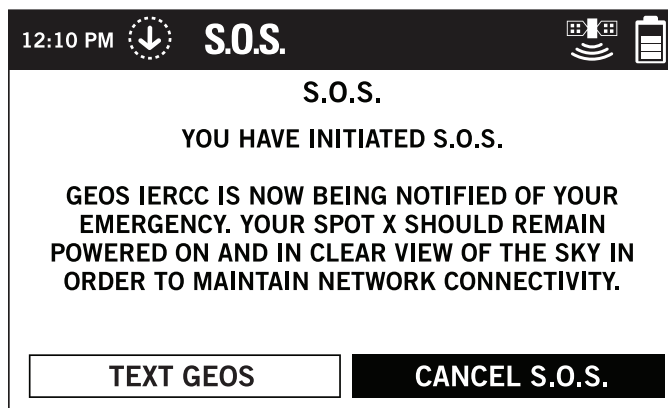


TRACKING

With SPOT X, your friends and family can track your progress in near real-time using **SPOT Share Page** with Google Maps™, giving them a virtual breadcrumb trail of your adventure.

SELECTING A TRACKING INTERVAL


The SPOT X default tracking interval is 10 minutes. Depending upon your service plan, you can select from tracking intervals of 2 ½, 5, 10, 30 or 60 minutes.

On the **Main Menu**, select  then scroll to and select **Tracking Interval** and choose from the list of available intervals. All non-subscribed tracking intervals will be grayed out.

TRACKING INTERVAL	
2.5 min (High Battery Usage)	<input type="radio"/>
5 min	<input type="radio"/>
10 min	<input checked="" type="radio"/>
30 min	<input type="radio"/>
60 min (Low Battery Usage)	<input type="radio"/>


INITIATING TRACKING

1. Power on the SPOT X and long press the Track button  on the SPOT X device for 3 seconds or until  appears in the **Status Bar**. Or from the **Main Menu** screen, select  followed by **Start Tracking**.

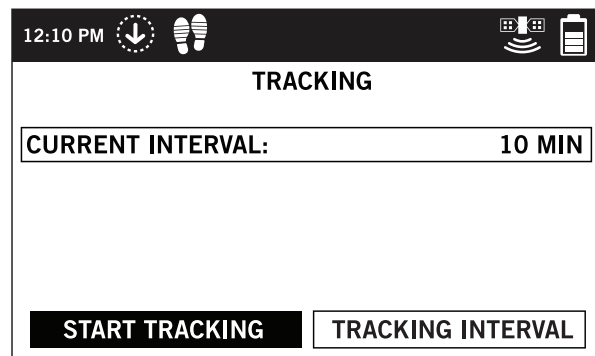


2. Once your GPS position is acquired, SPOT X will send your tracks in accordance with the tracking interval you have selected until you manually stop tracking, the SPOT X detects no movement, or you power off the SPOT X device.
3. While Tracking is active, SPOT X should remain outside in clear view of the sky with no obstructions in order to maintain network connectivity.

CANCELING TRACKING


Long press the  on the device for 3 seconds and follow the onscreen instructions. You can also cancel Tracking by selecting **Stop Tracking** from the **Tracking** screen and following the onscreen instructions.



Tracking Button

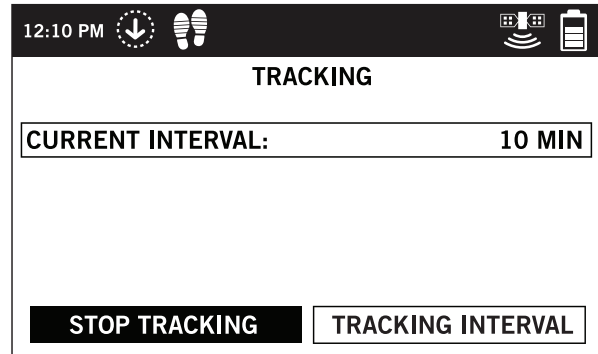

SUSPENDED TRACKING MODE

SPOT X only sends tracks when Tracking mode is active and the device is moving. When the device is stationary for more than **5** minutes, SPOT X will enter **Suspended Tracking** mode and you will see  in the **Status Bar**.

SPOT X will automatically send one more track from your resting location. While at rest, SPOT X will not send tracks. Tracking will automatically resume after the accelerometer detects the unit has begun moving again.

MESSAGE FETCHING


Every time SPOT X sends a tracking message and/or a message, SPOT X will also retrieve and download any incoming messages.

If Tracking is not active or an outbound message hasn't been sent by the device, the SPOT X can be configured to automatically check for messages at specified fetch intervals.


SELECTING A MESSAGE FETCHING RATE


The SPOT X default fetching rate is Off/Manual Fetching. Depending upon your service plan, you can select from fetching rates of 2 1/2 min, 5 min, 10 min, 30 min, 60 min, 4 hrs, or 24 hrs.


On the **Main Menu**, select  then scroll to and select **Fetch Rate** and choose from the list of available fetching rates. All non-subscribed intervals will be grayed out.

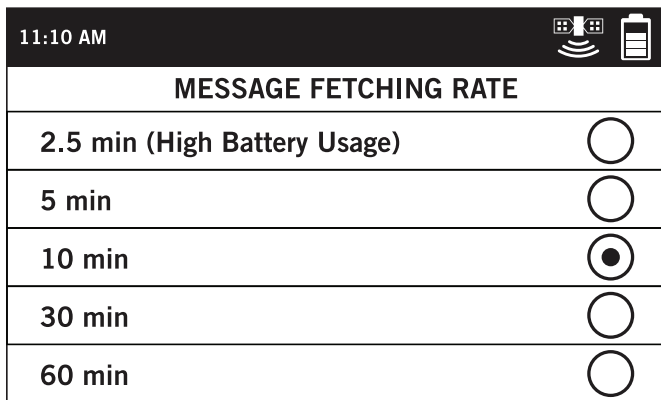

MANUALLY FETCHING NEW MESSAGES


To manually check for new incoming messages, simply select  from the **Main Menu** screen.


If any new incoming messages are received,  will be displayed in the **Status Bar** letting you know how many new messages are waiting for you.

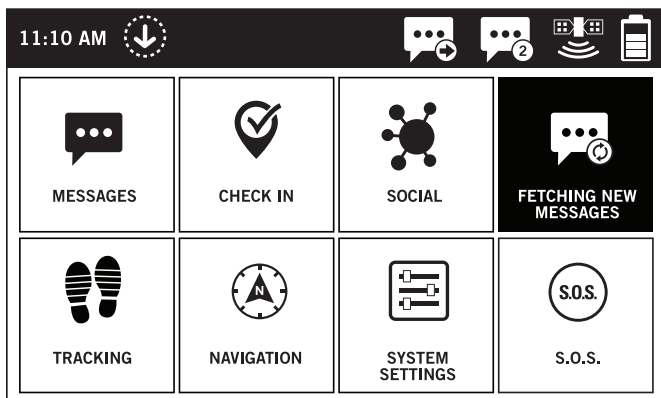

NAVIGATION


SPOT X has a built-in compass that comes with several navigational features and trip information to help you navigate.

To access the **Compass** from the **Main Menu** screen, select  followed by **Compass**.

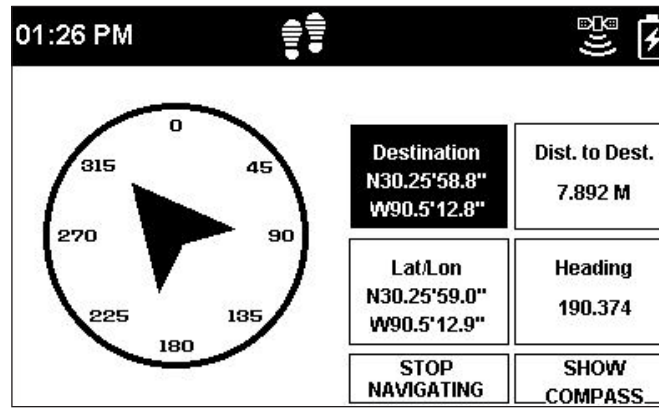

CALIBRATING THE COMPASS

Your SPOT X uses a Digital Compass to give accurate Heading and Bearing information. The SPOT X automatically checks compass calibration and will tell you to calibrate when necessary.

1. On the **Main Menu**, select  then select **Settings** and scroll to and select the **Calibrate Compass** button.
2. The **Calibrate Compass** screen will be displayed. Select **Start Calibration** to begin and follow the onscreen instructions.

TRIP INFORMATION DATA FIELDS

The SPOT X Compass screen is able to display four Trip Info Data Fields at a time. Each data field can be easily configured and changed by selecting from seven different choices:

- Location (Lat/Lon)
- Destination (Lat/Lon)
- Distance to Destination
- Heading
- Bearing
- Course
- Elevation
- Speed

CONFIGURING TRIP INFORMATION DATA FIELDS



1. On the **Compass** screen, select Trip Info. If a calibration has never been done before, the **Calibrate Compass** screen will be displayed. Select **Start Calibration** to begin and follow the onscreen instructions.
2. Using the **Navigation Pad**, highlight and select the Data Field you wish to change.
3. The **Trip Info Data Field** screen will be displayed. Highlight and select the appropriate navigational data you wish to be displayed in that field.



TRIP INFORMATION			
Lat/Lon N30.25'59.2" W90.5'13.1"	Destination N30.25'58.8" W90.5'12.8"	Dist. to Dest. 14.487 M	Heading 225.685
Bearing 147.110	Course 145.402	Elevation 83.488 M	Speed 0 KPH
Stop Navigating			


WAYPOINTS

SPOT X allows you to designate important locations and landmarks as Waypoints on your device and navigate to them.

CREATING A WAYPOINT

1. On the **Main Menu** screen, select  then select **Waypoint** followed by  to create a new waypoint.
2. Select either:
 - **Current Location** – creates a new waypoint based on the current GPS coordinates of the SPOT X
 - **Create Waypoint** – creates a new waypoint by manually entering GPS coordinates
 - The **Waypoint** screen will be displayed. If **Current Location** was selected, the Location field will input the current GPS coordinates automatically. If **Create Waypoint** was selected, the GPS coordinates will have to be input manually.

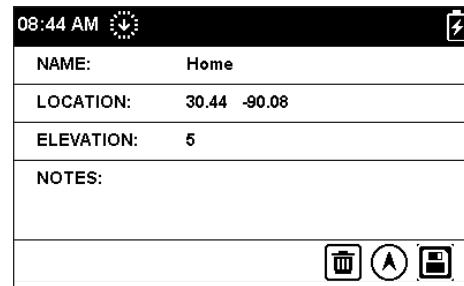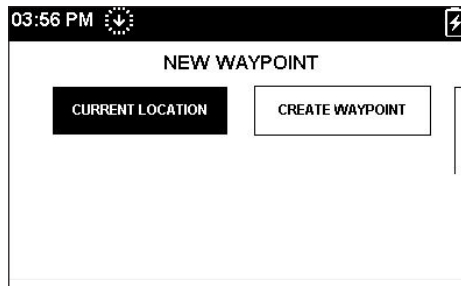

3. To change the name of a waypoint, enter your selected waypoint name in the **Waypoint Name** field.
4. Selecting the **Notes** field will display the **Waypoint Notes** screen allowing you to enter up to 300 characters. Select **DONE** to save the notes.
5. When finished, select  to save the waypoint.

NAVIGATING TO A WAYPOINT

1. On the **Main Menu** screen, select  then select **Waypoint** and chose the specific waypoint you'd like to travel towards.

NOTE: For best results, while navigating, hold the SPOT X with the antenna at about a 135 degree angle.

2. The selected **Waypoint** screen will be displayed. Select the **Navigate To** button.
3. The **Compass** screen will appear displaying the Compass and the following Data Fields:
 - **Destination** – with the selected Waypoint coordinates
 - **Distance to Destination** – in a straight line
 - **Lat/Lon** – current GPS location
 - **Course** – direction towards selected Waypoint


SYSTEM SETTINGS

From the System Settings screen, you can manage all different aspects of your SPOT X device from viewing your data usage to selecting your preferred language.

VIEWING DATA USAGE

The Data Usage screen allows you to monitor your SPOT X data usage and your SPOT X Service Plan details.

On the **Main Menu** screen, select  then scroll to and select **Data Usage**.

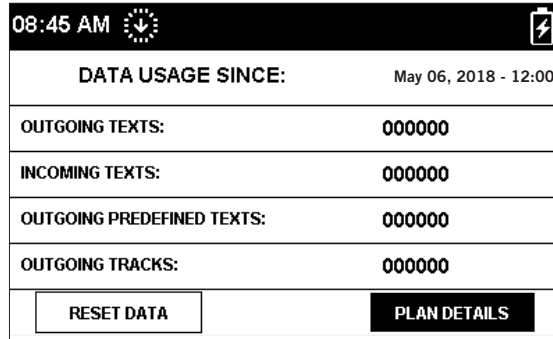

DATA USAGE SINCE: May 06, 2018 - 12:00	
OUTGOING TEXTS:	000000
INCOMING TEXTS:	000000
OUTGOING PREDEFINED TEXTS:	000000
OUTGOING TRACKS:	000000
RESET DATA	PLAN DETAILS

The **Data Usage** screen displays the following:


- Total messages sent since the last data reset
- Total incoming messages since the last data reset
- Total outgoing predefined Messages
- Total outgoing tracks since the last data reset

Selecting the **Reset Data** button will erase and reset all counters to zero.

VIEWING SERVICE PLAN DETAILS

Selecting **Plan Details** allows you to see the **Service Plan Details** screen displaying the following:

- Current SPOT X Service Plan name
- The number of Free Predefined Messages
- The number of included messages for the active SPOT X Service Plan
- The minimum tracking interval for the active SPOT X Service Plan
- The cost per message you will be charged if you go over your allotted messages

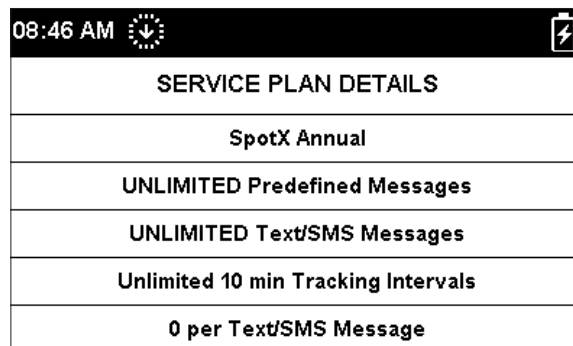


SERVICE PLAN DETAILS
SpotX Annual
UNLIMITED Predefined Messages
UNLIMITED Text/SMS Messages
Unlimited 10 min Tracking Intervals
0 per Text/SMS Message

LANGUAGE SETTINGS

You can change the language setting on your SPOT X to one of the following:

- English
- Español
- Français
- Português
- Italiano
- Deutsch




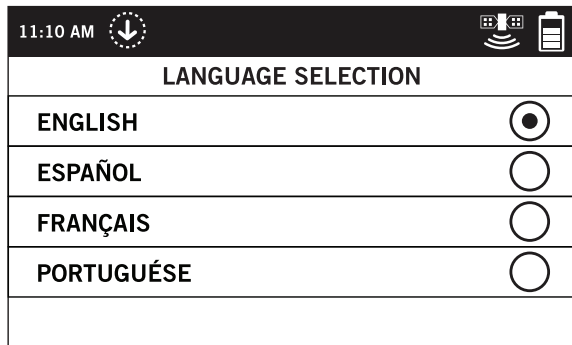


TIME AND DATE SETTINGS

The Time/Date Settings screen allows you to configure how the time and date are displayed on your SPOT X device.

Select **Time Format** and choose between 12 hour or 24 hour format.


Select **Set Time/Date** to manually set the time and date displayed on your SPOT X device.

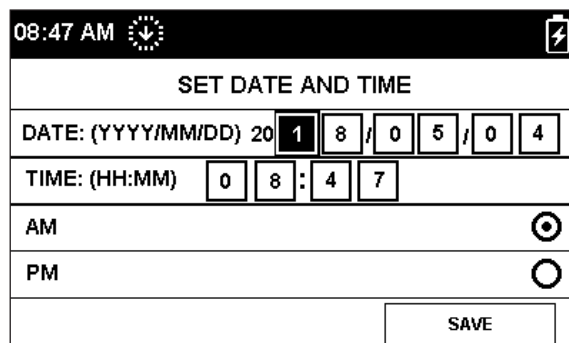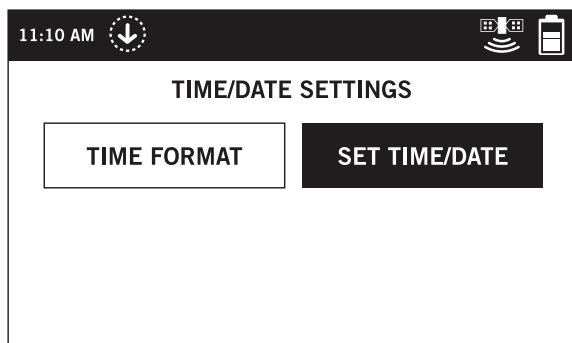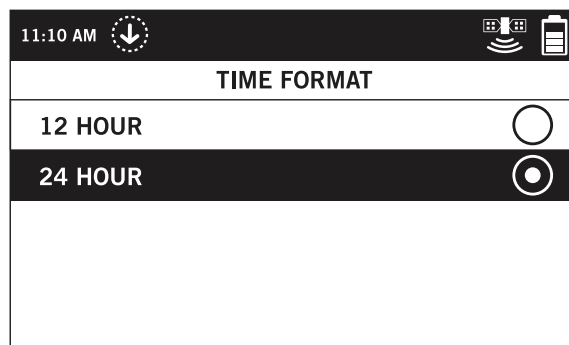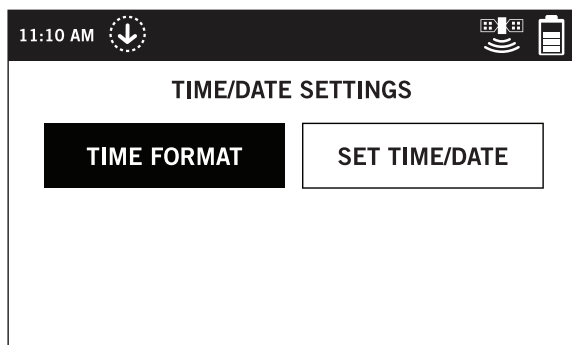

DISTANCE UNIT SETTINGS

The Distance Unit screen allows you to configure the SPOT X display measurements by selecting from the follow options:




- Metric (Meters)
- Imperial/US (Feet)
- Nautical

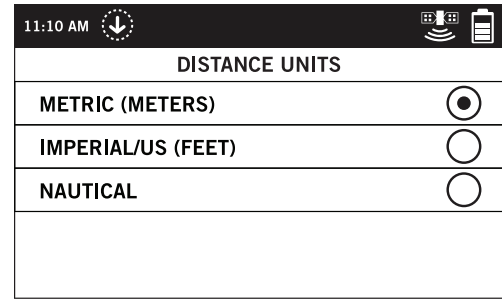

DISPLAY SETTINGS

The Display Settings screen allows you to configure the SPOT X to turn on or turn off the Poor Sky View Warning, Antenna Position Warning as well as Invert Display.

- The Poor Sky View Warning: The warning will be displayed when there are incoming messages that are not fully received after 5 minutes.
- Antenna Position Warning: The warning will be displayed when the SPOT X is not being held upright.
- Invert Screen Display: This function will switch the background to black and the white text.

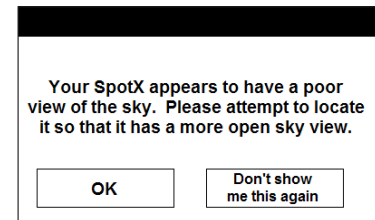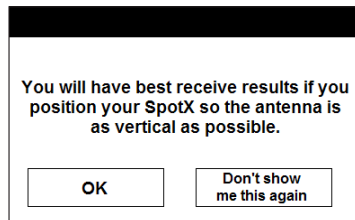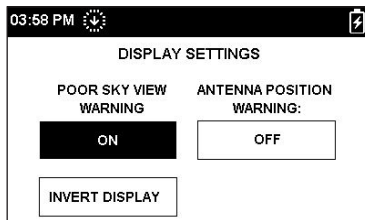

SPOT X INFORMATION

The **SPOT X Information** screen allows you to see the following SPOT X information:

- SPOT X Unique Mobile Device Number
- ESN
- Auth Code
- Firmware Version
- Date of last My ACCOUNT Sync

SPOTX INFORMATION	
MDN:	12544601271
ESN:	0-2901462
AUTH CODE:	1111
FIRMWARE:	00002A-001003-010017-000010
LAST SYNC:	2018-05-04 08:40:00

RESTORE FACTORY SETTINGS

The **Restore Factory Settings** screen resets the SPOT X to its default factory settings.

NOTE: Resetting the SPOT X to the out-of-the-box Factory Settings will erase all data on the SPOT X including all contacts, account information, waypoints, and message threads.

DEMO/RETAIL MODE

Enabling Demo/Retail Mode causes the SPOT X to display preset marketing images when the device is powered off.

REGULATORY INFO

The Regulatory Information shows the manufacturer, model and certifications.

DISABLE/ENABLE SCREEN S.O.S.

Disabling or enabling the S.O.S. function from the screen will remove or enable the ability to initiate S.O.S. from the main menu.

SPOT MY ACCOUNT


Your **My Account** website is a quick and easy way to configure SPOT X. From My Account you can access the following:

- Getting Started
- My Devices
 - ▶ Enable/Disable Movement Alerts
 - ▶ Duplicate SPOT X Settings
 - ▶ Edit S.O.S. Emergency Contacts
 - ▶ Create and Manage Contacts
 - ▶ Configure Help/SPOT Assist
 - ▶ Configure Social Media Accounts
 - ▶ Configure Message Blocker
 - ▶ Create and Edit Predefined Messages
 - ▶ Configure Check In/OK
 - ▶ Enable/Disable Undelivered Message Notifications
- My Locations
- Share
- Setting & Billing

MY ACCOUNT – MY DEVICES

SPOT X MY DEVICES OVERVIEW

- 1 **Device Type** - Displays the SPOT device type, i.e. SPOT X
- 2 **Renewal Date** - Displays the date the SPOT X Service plan will automatically be renewed
- 3 **ESN** - Displays Electronic Serial Number that identifies the SPOT X
- 4 **Auth Code** - Displays Authorization Code for the SPOT X
- 5 **Mobile Device Number** - Displays telephone number assigned to the SPOT X
- 6 **Services** - Displays all of the services that are associated with the current SPOT X Service plan
- 7 **Text Messages Used** – Displays the total number of text messages sent/received, and the number of text messages allowed for the current SPOT X Service plan (red numbers indicate overages)
- 8 **Date of Last Sync** – Displays the date the last time the SPOT X was synced with My Account

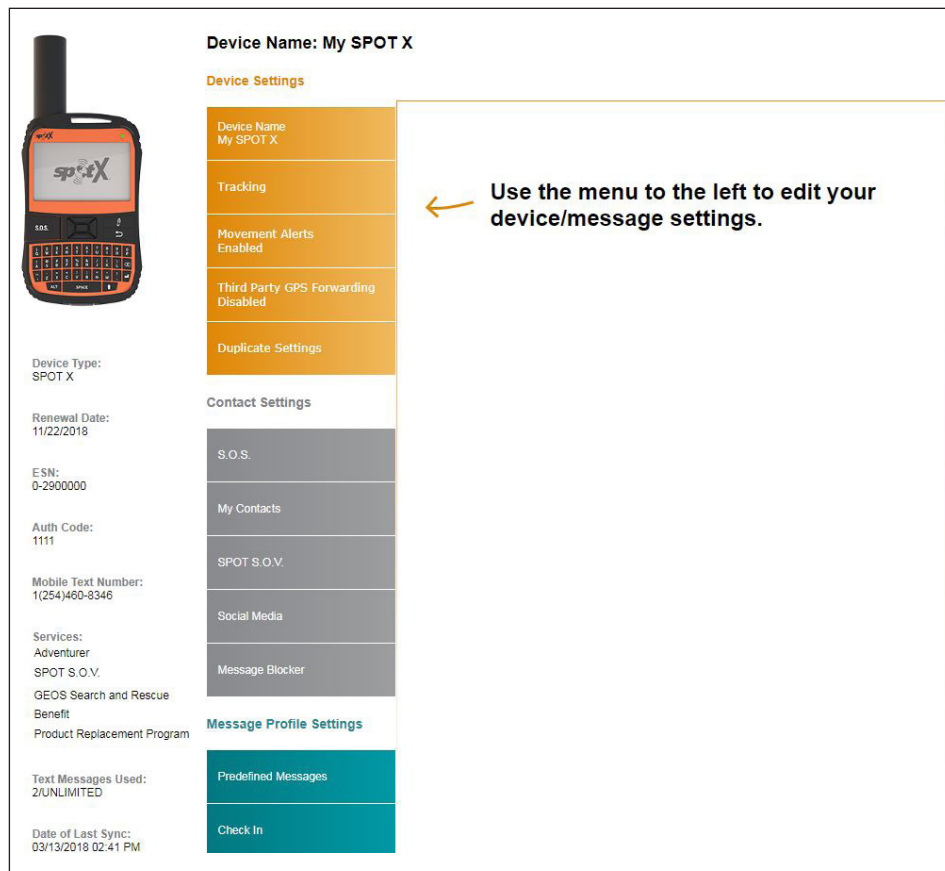

The screenshot displays the 'My SPOT X' account page. On the left is a small image of a SPOT X device. The main content area is divided into several sections:

- Device Name:** My SPOT X
- Device Settings:** A list of settings including Device Name (My SPOT X), Tracking, Movement Alerts (Enabled), Third Party GPS Forwarding (Disabled), and Duplicate Settings.
- Contact Settings:** A list of contact-related options including S.O.S., My Contacts, SPOT S.O.V., Social Media, and Message Blocker.
- Message Profile Settings:** A list of message-related options including Predefined Messages and Check In.

Account information is listed on the left side of the page:

- Device Type: SPOT X
- Renewal Date: 11/22/2018
- ESN: 0-2900000
- Auth Code: 1111
- Mobile Text Number: 1(254)460-8346
- Services: Adventurer, SPOT S.O.V., GEOS Search and Rescue, Benefit, Product Replacement Program
- Text Messages Used: 2/UNLIMITED
- Date of Last Sync: 03/13/2018 02:41 PM

An orange arrow points to the 'Device Settings' menu with the text: "Use the menu to the left to edit your device/message settings."

- 9 **Device Name Tab** – Used to change the name of the SPOT X
- 10 **Tracking Tab** – Displays the tracking interval available in accordance with the current SPOT X Service plan
- 11 **Movement Alerts Tab** – Used to Enable/Disable and configure Movement Alert Messages
- 12 **Third Party GPS Forwarding Tab** – Used to Enable/Disable and configure the forwarding of your coordinates to a 3rd party application or web service
- 13 **Duplicate Settings Tab** – Used to copy Contact, Message Profiles and Navigation settings between SPOT X devices on the same account
- 14 **S.O.S. Tab** – Used to change Primary and Secondary Emergency Contact information
- 15 **My Contacts Tab** – Used to create contacts and contact groups – SPOT X can have up to 70 contacts residing on the device
- 16 **SPOT S.O.V. Tab** – Used to edit your S.O.V. contact phone numbers
- 17 **Social Media Tab** – Used to link the SPOT X to social media accounts
- 18 **Message Blocker Tab** – Used to control who can send messages to the SPOT X – Defaults to Accept All
- 19 **Predefined Messages Tab** – Used to create predefined messages that can be sent at no cost from the SPOT X – Up to 14 predefined messages can be stored on the SPOT X
- 20 **Check In Tab** – Used to create and configure a free message to be sent to up to 10 recipients when Check In/OK is selected on the SPOT X
- 21 **Undelivered Message Notification Tab** – Used to enable/disable undelivered message notifications – If the SPOT X is turned off, incoming messages will not be delivered, enabling this feature will send an email notification allowing for the viewing of these messages
- 22 **Waypoints Tab** – Used to create and edit waypoints to easily sync to the SPOT X

DEVICE NAME TAB

Give a unique name to the SPOT X. For accounts with multiple SPOT X's or other SPOT devices, giving a unique name to the device will make it easier to identify and select the SPOT X.

Simply enter a new name in the **Name** field and select **Save**.



Device Type:
SPOT X

Renewal Date:
11/22/2018

ESN:
0-2900000

Auth Code:
1111

Mobile Text Number:
1(254)460-8346

Services:
Adventurer
SPOT S.O.V.

GEOS Search and Rescue
Benefit
Product Replacement Program

Text Messages Used:
2/UNLIMITED

Date of Last Sync:
03/13/2018 02:41 PM

Device Name: My SPOT X

Device Settings

Device Name My SPOT X
Tracking
Movement Alerts Enabled
Third Party GPS Forwarding Disabled
Duplicate Settings

Contact Settings

S.O.S.
My Contacts
SPOT S.O.V.
Social Media
Message Blocker

Message Profile Settings

Predefined Messages
Check In



Use the menu to the left to edit your device/message settings.

TRACKING TAB

The **Tracking** Tab displays the Tracking and Message Fetching intervals in accordance with the current purchased SPOT X Service Plan. Bolded intervals indicate available intervals and grayed out intervals indicate intervals that are not currently available.

Tracking and Message Fetching intervals are configured directly on the SPOT X.

Device Name: My SPOT X

Device Settings

- Device Name
My SPOT X
- Tracking**
- Movement Alerts
Enabled
- Third Party GPS Forwarding
Disabled
- Duplicate Settings

Contact Settings

- S.O.S.
- My Contacts
- SPOT S.O.V.
- Social Media

Tracking and Message Fetching

Tracking allows for friends and family to track your progress in near real-time with SPOT Share Page which uses Google Maps™, giving them a virtual breadcrumb trail of your adventure.

Tracking and Message Fetching settings can only be configured directly on the SPOT X device. If you would like to change your Tracking interval and/or Message Fetching rate, please do so directly on the SPOT X device. Syncing your SPOT X with your SPOT My Account is not required for changes to take place.

Available Intervals

The Tracking and Message Fetching intervals(s) displayed below are available in accordance with your purchased service plan.

- Every 2½ minutes**
- Every 5 minutes**
- Every 10 minutes**
- Every 30 minutes
- Every 60 minutes

MOVEMENT ALERTS TAB

The **Movement Alerts tab** allows for the configuration of the movement notification alerts when the SPOT X vibration sensor detects new movement.

CONFIGURING MOVEMENT ALERTS

1. Click **Enable** and the **Movement Alerts** tab will expand displaying more information.
2. Select the amount of time the SPOT X must be stationary before a Movement Alert will be sent.
3. In the **Message to Send** field, enter the message to be sent when a Movement Alert is initiated.
4. Select **Add Email** and/or **Add Mobile Number** and either an **Email** or **Mobile Number** popup will be displayed.
5. Enter the appropriate Email or Mobile Number and click **OK**.
6. Repeat Step 5 for additional recipients (up to 10 recipients).

The screenshot shows the configuration interface for a device named "My SPOT X". On the left is a sidebar menu with categories: "Device Settings" (containing Device Name, Tracking, Movement Alerts, Third Party GPS Forwarding, Duplicate Settings), "Contact Settings" (containing S.O.S., My Contacts, SPOT S.O.V., Social Media, Message Blocker), and "Message Profile Settings" (containing Predefined Messages). The "Movement Alerts" option is highlighted with an orange arrow. The main content area is titled "Movement Alerts" and includes a description: "Select your Movement Alert rate. This rate determines the amount of time the device must be stationary before a Movement Alert is sent." Below this are four radio button options: "30 minutes" (selected), "1 hour", "4 hours", and "12 hours". A status message reads "Movement Alerts are enabled." with a teal "Disable" button below it. There is a checkbox for "Keep feature active, but temporarily suspend messages." which is unchecked. The "Message to Send:" field contains the text "monitored device has moved." in a text area. Below that is the "Send Messages To:" field, which is currently empty. At the bottom of the main area are two buttons: "Add Email" and "Add Mobile Number".

THIRD PARTY GPS FORWARDING TAB

Third Party GPS Forwarding sends the SPOT X's GPS coordinates to a designated third-party web-based application; by default this ability is disabled.

If a third party application provider has partnered with SPOT:

1. Request the Third Party Identification Code from your third party provider.
2. Enter the Third Party Identification Code in the Third Party field.
3. Select **Enable**.

The screenshot displays the settings for a device named "My SPOT X". On the left is a navigation menu with the following items: "Device Settings" (highlighted in orange), "Tracking", "Movement Alerts Enabled", "Third Party GPS Forwarding Disabled" (highlighted in orange with a right-pointing arrow), "Duplicate Settings", "Contact Settings", and "S.O.S.". The main content area is titled "Third Party GPS Forwarding" and contains the following text: "Forward a third party web-based application your GPS coordinates generated by your SPOT device.", "Third Party Access is **disabled**.", and "Enter a Third Party Identification Code. This code can be provided by your third party provider." Below this text is a text input field and a teal "Enable" button.


DUPLICATE SETTINGS TAB

The Duplicate Settings tab allows for the copying and transferring Contact, Message and Navigational settings between SPOT X devices within My Account.

COPY DEVICE SETTINGS TO ANOTHER SPOT X

1. Select **Copy Device Settings to Another SPOT X** and the Copy Device Settings to Another SPOT X popup will be displayed.
2. In the **Settings** section, select the settings to be copied.
3. In the **Copy to** section, select the SPOT X to copy the settings to and click on **Copy**.
4. Sync the SPOT X with My Account.

NOTE: All settings selected will copy over previous settings in the selected SPOT X.

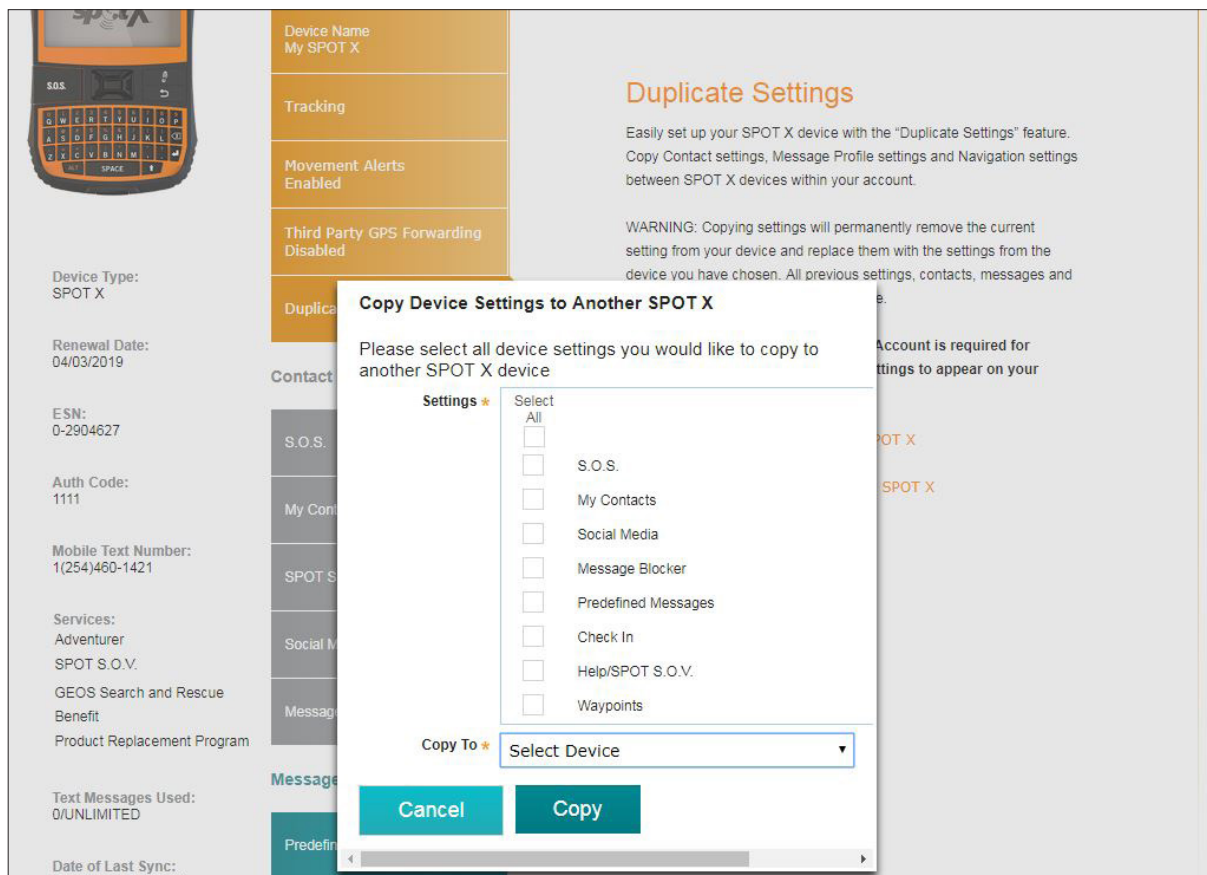

S.O.S. TAB

While **S.O.S.** is active, 2-way communication with GEOS International Emergency Response Coordination Center (IERCC) is available directly from your SPOT X.

The **S.O.S.** Tab is used to change your Primary and Secondary Emergency Contact names and telephone numbers that GEOS contacts when an S.O.S. is initiated.

The Primary Emergency Contact information must be different from the Secondary Emergency Contact information. This is required to provide GEOS with additional points of contact in case of an S.O.S./911 emergency.

Renewal Date: 04/03/2019

ESN: 0-2904627

Auth Code: 1111

Mobile Text Number: 1(254)460-1421

Services:
Adventurer
SPOT S.O.V.
GEOS Search and Rescue Benefit
Product Replacement Program

Text Messages Used: 0/UNLIMITED

Date of Last Sync: 04/25/2018 09:01 AM

[Download the SPOT X User Guide](#)

[Download the SPOT X Quick Start Guide](#)

Contact Settings

- S.O.S.
- My Contacts
- SPOT S.O.V.
- Social Media
- Message Blocker

Message Profile Settings

- Predefined Messages
- Check In
- Undelivered Message Notification

Navigation Settings

- Waypoints

IMPORTANT NOTICE: S.O.S. MODE SHOULD ONLY BE USED DURING LIFE THREATENING EMERGENCIES. SENDING FALSE S.O.S. MESSAGES MAY SUBJECT YOU TO LIABILITY FOR ADDITIONAL CHARGES.

The ability to send S.O.S. alerts and 2-Way text messages to GEOS IERCC is covered in your SPOT Service Plan. However, any cost associated with the rescue efforts are billed directly to the parties. Make sure you're covered in the event of an emergency with the **GEOS Search & Rescue Benefit**.

[Learn more about GEOS Search & Rescue Benefit](#)

Check this box if the user of this SPOT device is someone other than yourself. Please provide their contact information.

Provide additional information if there is anything GEOS Search and Rescue would need to know about you (i.e. Medical conditions, allergies, prescriptions, etc.)

The Primary and Secondary Emergency Contacts must also be different from one another, and they must also be different from the account holder's phone number entered when registering this device. This is required to provide the emergency response coordination center with additional points of contact in an S.O.S. emergency.

Your Primary Emergency Contact

Full Name *

Jane Smith

Country *

United States of America ▼

Phone Number *

9852257896

Your Secondary Emergency Contact

MY CONTACTS TAB

This feature allows you to create contacts and contact groups and sync your contacts to your SPOT X device using My Account. Your SPOT X can hold up to 70 contacts, including contact groups. A separate contact will be created based off of the contact type entered, so if an email address & a phone number is added for a single person, that person will count as two contacts instead of one. Each contact group can hold up to 10 contacts. When sending a message from your SPOT X, only 10 individual contacts or 1 contact group can be selected per message.

CREATE NEW CONTACT

1. Select **Create New Contact** and the **Add a New Contact** popup will be displayed.
2. Enter the appropriate information and select **Save**. If both Email Address and Mobile Number fields are filled in, two contacts will be created, one for Email and one for Text. You must select the country code and include the area code before saving a contact phone number.
3. The new contact will be displayed in the **Contact Name** field.

CREATE NEW CONTACT GROUP

1. Select **Create New Contact Group** and the **Add a New Contact Group** popup will be displayed.
2. Enter the Group Name, select up to 10 contacts, and select **Save**.
3. The new contact group will be displayed in the **Contact Name** field.

ADDING CONTACTS TO THE SPOT X

Syncing SPOT X with SPOT My Account is required for contacts and contact groups to appear on your device.

1. In the **Contact Name** field, select a contact by clicking on the appropriate checkbox – up to 70 contacts can be selected.
2. Select the contacts that you would like to sync by clicking on the checkbox next to the contact (up to 70 contacts can be synced) and select **Save**.
3. Click **Confirm Changes**
4. Sync the SPOT X with **My Account**.
5. Sync & update your device using the **SPOT X Firmware Updater**.

DELETING CONTACTS

Syncing SPOT X with SPOT My Account is required for contacts and contact groups to be removed from your device.

1. In the **Contact Name** field, select Delete next to the name you want to remove.
2. A pop-up message will display asking to confirm the action requested.
3. Confirm Changes at the top of the page.
4. Sync the SPOT X with **My Account**.
5. Sync & update your device using the **SPOT X Firmware Updater**.

The screenshot displays the 'My Contacts' management page in the SPOT X My Account interface. On the left, a sidebar contains device information: Device Type: SPOT X, Renewal Date: 04/03/2019, ESN: 0-2904627, Auth Code: 1111, Mobile Text Number: 1(254)460-1421, and Services: Adventurer, SPOT S.O.V., GEOS Search and Rescue Benefit, and Product Replacement Program. Below this is 'Text Messages Used: 0/UNLIMITED' and 'Date of Last Sync: 04/25/2018 09:01 AM'. A 'Download the SPOT X' button is at the bottom left. The main content area is titled 'My Contacts' and includes instructions on creating and syncing contacts. A confirmation dialog box is overlaid in the center, asking 'Delete this contact?' with the text: 'Selecting YES will delete the contact and also delete the contact from all contact groups within My Account. This will not delete the contact from your SPOT X until a sync is been performed. Do you want to continue?'. The dialog has 'No' and 'Yes' buttons. In the background, a list of contacts is visible, including 'Chelsea K', 'Chris Gardiner', and 'Ernesto Abdo', each with an 'Edit' and 'Delete' option. A 'Save' button is visible in the top right of the contact list area.

SPOT S.O.V. (SAVE OUR VEHICLE)

SPOT S.O.V. is our 24/7 vehicle assistance feature that gets help for you and your car, SUV, ATV, RV, trailer or motorcycle. It doesn't matter how far off the grid you go or even if you have zero bars of cell service, you can count on us to get you out of a jam.

SPOT has partnered with Nation Safe Drivers (NSD) to provide a vehicle assistance program like no other. NSD is one of the largest suppliers of towing and roadside assistance, even on the most obscure and hard to travel roads imaginable. It doesn't matter if the roads are paved, dirt or gravel, NSD partners will be there to save your vehicle.

SPOT S.O.V. is an additional service offered for as low as \$30.00 per year that allows you to send your GPS locations to NSD so you can be located quickly.

SPOT S.O.V. ASSIST FEATURES:

- Up to 5 tows per year
- Up to 50 miles each tow
- Winching/Extrication Services
- Accident assistance
- Gas & oil delivery
- Emergency tire service
- Emergency battery service
- Lost key and lockout service
- Service is available in 50 U.S. states, as well as Puerto Rico, Washington, D.C. and Canada

Device Name: SPOT X 2

Device Settings

Device Name SPOT X 2
Tracking
Movement Alerts Disabled
Third Party GPS Forwarding Disabled
Duplicate Settings

Contact Settings

S.O.S.
My Contacts

SPOT S.O.V.

SPOT S.O.V. can be used during non-life threatening situations and allows you to send 2-Way text messages to Nation Safe Drivers. SPOT S.O.V. services provided by Nation Safe Drivers, are only available to subscribing customers in the U.S., Puerto Rico, Washington, D.C. and Canada.

[+ Add SPOT S.O.V. Assist](#) [Learn more about SPOT S.O.V.](#)

SOCIAL MEDIA TAB

The **Social Media** tab is used to link your social media accounts with the SPOT X. Once you've linked your accounts you will be able to send 140 character updates to those accounts from your SPOT X at any time.

TWITTER

1. In the **Twitter** section, click on **Link**.
2. Follow all on-screen directions.

The screenshot displays the settings interface for a device named "My SPOT X". On the left, there are two main sections: "Device Settings" and "Contact Settings".

- Device Settings:** Includes "Device Name: My SPOT X", "Tracking", "Movement Alerts: Enabled", "Third Party GPS Forwarding: Disabled", and "Duplicate Settings".
- Contact Settings:** Includes "S.O.S.", "My Contacts", "SPOT S.O.V.", "Social Media" (highlighted with a grey arrow), and "Message Blocker".

The main content area on the right is titled "Social Media" and contains the following text:

Link your Twitter account to your SPOT X and keep your friends and family in the know wherever you go!

Once you've linked your social media account with your SPOT My Account, simply select Twitter from your SPOT X contact list and you will be able to post 140 character updates to that account directly from your SPOT X device at any time.

Syncing SPOT X with your SPOT My Account is required for Twitter to appear as a contact on your device.

Below this text is a grey box with the Twitter logo and the following information:

- Link your Twitter Account **Link**
- Linking your SPOT My Account with Twitter allows you to post messages to your Twitter account.
- Not Connected
- Last Update: N/A

MESSAGE BLOCKER TAB

By updating these settings, you can easily control who you receive messages from.

SELECTING A BLOCKING MODE

1. Select the appropriate blocking mode:


- **Blacklist Mode** – Blocks only incoming messages listed in the blacklist
- **Whitelist Mode** – Blocks all incoming messages that are not on your whitelist or listed as a contact in My Account
- **Synced Contacts Only** – Block all numbers and emails that have not been synced to your SPOT X device.
- **Block All** - Blocks all incoming messages
- **Accept All** – Accept all incoming messages

2. Click **Save**.

ADD TO THE BLACKLIST

1. In the Blocking Mode section, select **Add** and the **Add to Blacklist** popup will be displayed.


2. Enter the Mobile # or Email address you wish to block, along with an associated name, and click **Save**.

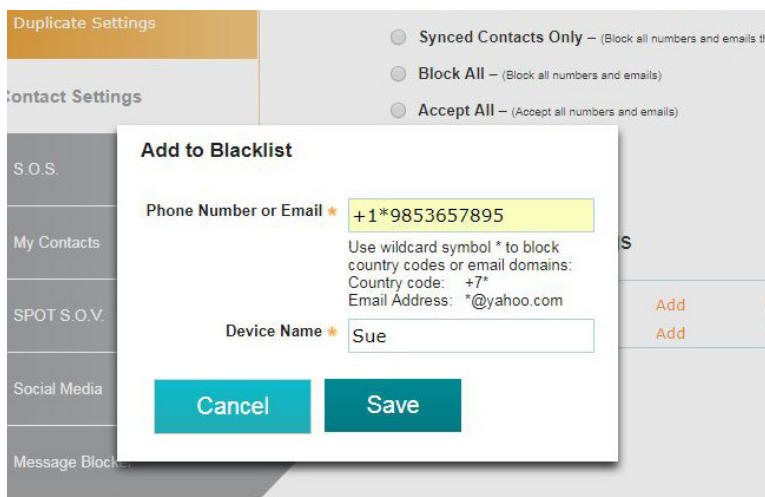

ADD TO THE WHITELIST

1. In the Blocking Mode section, select **Add** and the **Add to Whitelist** popup will be displayed.


2. Enter the Mobile # or Email address you wish to add, along with an associated name and click **Save**.

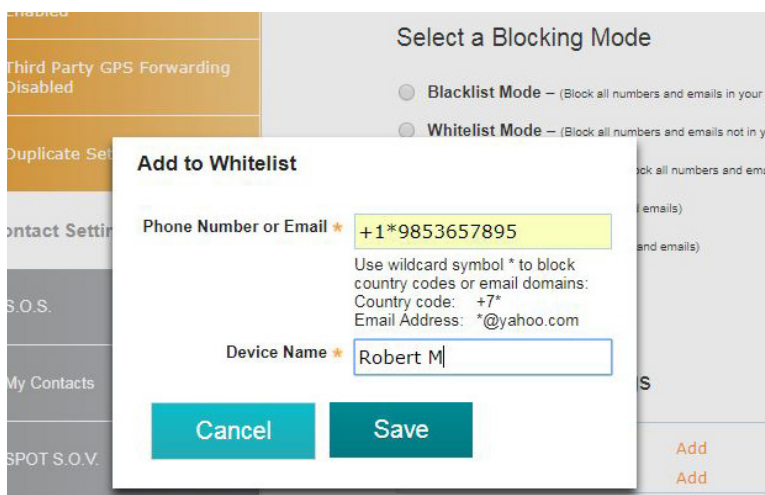

DELETE FROM THE BLACKLIST

1. In the Blocking Mode section, select **View/Edit** and the **Delete from Blacklist** pop-up will be displayed.


2. Check the boxes of the contacts you wish to remove from the Blacklist and click **Delete**.

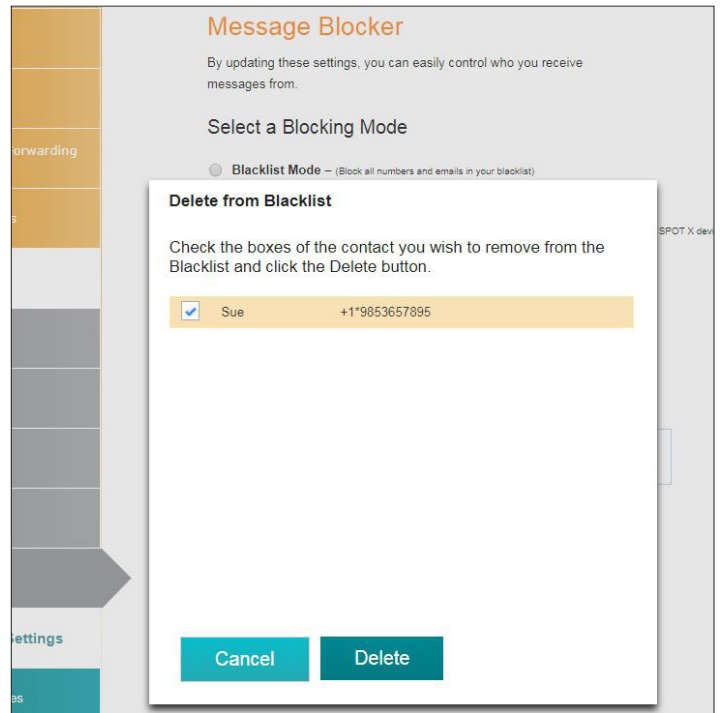

DELETED FROM THE WHITELIST

1. In the Blocking Mode section, select **View/Edit** and the **Delete from Whitelist** pop-up will be displayed.

2. Check the boxes of the contacts you wish to remove from the Whitelist and click **Delete**.

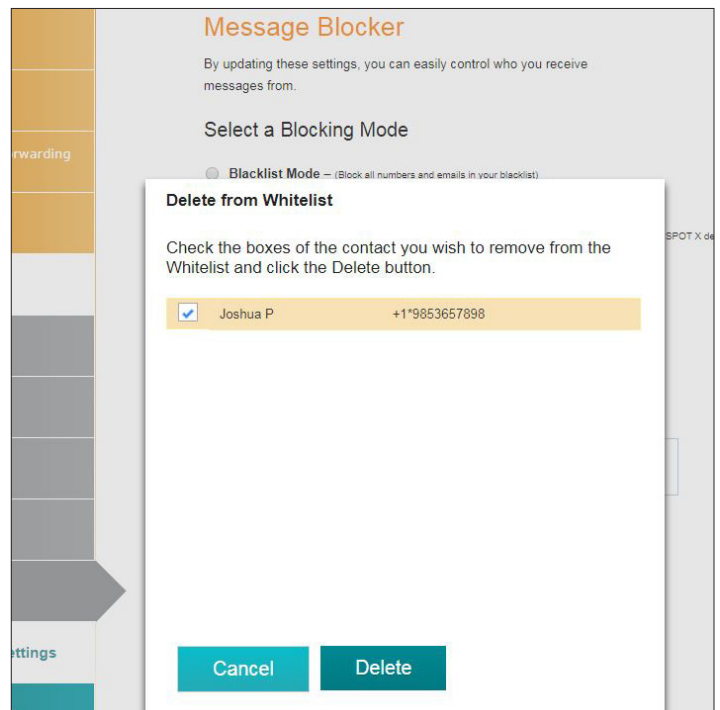

PREDEFINED MESSAGES TAB


Make texting even easier by sending a Predefined Message. Send an unlimited number of Predefined Messages to your contacts at no cost.

Up to 14 Predefined Messages can be created and stored on your SPOT X device so you can quickly update your friends and family. Each message can be up to 140 characters in length.

NOTE: Syncing your SPOT X with SPOT My Account is required for the changes to reside on your SPOT X.


CREATING A PREDEFINED MESSAGE

1. Select **Create a New Predefined Message** and the **Create a New Predefined Message** popup will be displayed.
2. In the Message field, enter a maximum of 140 character message and click **Save**.

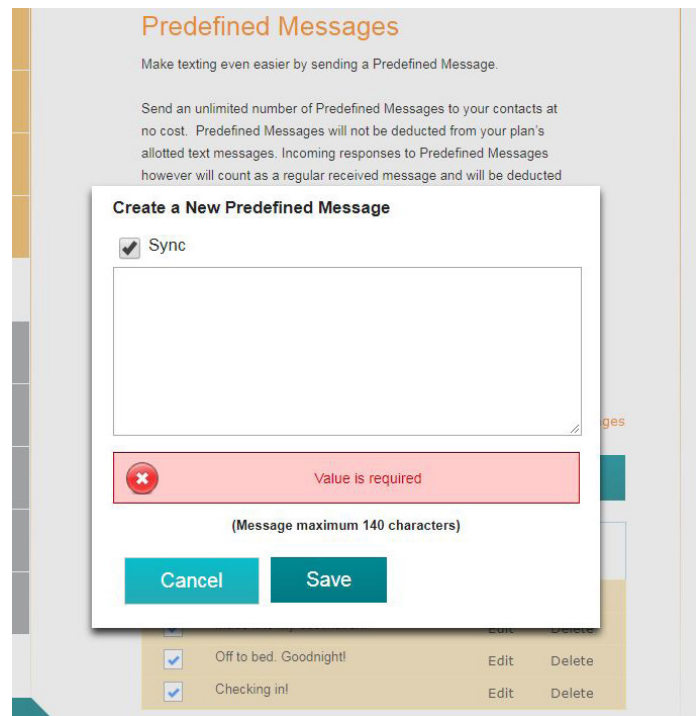

DELETING A PREDEFINED MESSAGE

1. In the Predefined Message section, Select **Delete** next to the message to be edited and the **Delete this Predefined Message** popup will be displayed.
2. Select **Yes** to Delete.

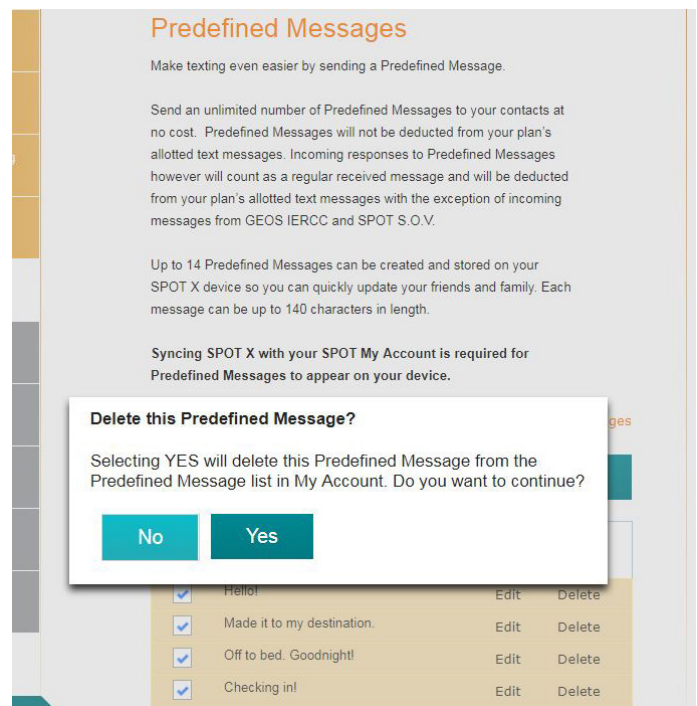

EDITING A PREDEFINED MESSAGE

1. In the Predefined Message section, select **Edit** next to the message to be edited and the **Edit/View a Predefined Message** popup will be displayed.
2. In the Message field, edit the Predefined Message and click **Save**.

SYNCING PREDEFINED MESSAGES TO THE SPOT X

Syncing SPOT X with your SPOT My Account is required for Predefined Messages to appear on your device.

1. Select the Predefined Messages that you would like to sync to your SPOT X device by clicking on the appropriate checkbox(s), click **Save** and then **Confirm Changes**. Up to 14 Predefined Messages can be selected.
2. Sync the SPOT X with **My Account**.

Device Name: My SPOT X

Device Settings

- Device Name
My SPOT X
- Tracking
- Movement Alerts
Enabled
- Third Party GPS Forwarding
Disabled
- Duplicate Settings

Contact Settings

- S.O.S.
- My Contacts
- SPOT S.O.V.
- Social Media
- Message Blocker

Message Profile Settings

Predefined Messages

Predefined Messages

Make texting even easier by sending a Predefined Message.

Send an unlimited number of Predefined Messages to your contacts at no cost. Predefined Messages will not be deducted from your plan's allotted text messages. Incoming responses to Predefined Messages however will count as a regular received message and will be deducted from your plan's allotted text messages with the exception of incoming messages from GEOS IERCC and SPOT S.O.V.

Up to 14 Predefined Messages can be created and stored on your SPOT X device so you can quickly update your friends and family. Each message can be up to 140 characters in length.

Syncing SPOT X with your SPOT My Account is required for Predefined Messages to appear on your device.

[Create a New Predefined Message](#) | [Delete Multiple Predefined Messages](#)

Predefined Messages Synced: **4**
Predefined Messages Selected to Sync: **2/4 (14 max)** **Save**

Select	Predefined Messages		
<input type="checkbox"/>	All		
<input checked="" type="checkbox"/>	Hello!	Edit	Delete
<input checked="" type="checkbox"/>	Made it to my destination.	Edit	Delete
<input type="checkbox"/>	Off to bed. Goodnight!	Edit	Delete
<input type="checkbox"/>	Checking in!	Edit	Delete

CHECK IN TAB

Check In with friends and family by quickly sending a pre-programmed message and/or email along with your GPS coordinates to up to 10 contacts at no cost to you. The Check In message will include a link to Google Maps™ showing the SPOT X's location. The Check In feature cannot be used unless it is setup before going on your adventure off the grid. A default message will be used unless a custom message is set up.

The Check In message can be created and assigned to contacts via SPOT My Account at any time.

CONFIGURING THE CHECK IN MESSAGE

1. In the Message to **Send** field, enter the Check In/OK message to send.
2. Select **Add Email** and/or **Add Mobile Number**, enter the appropriate contact information, and click **OK**.
3. Repeat Step 2 for additional recipients (up to 10).
4. Click **Save**.

NOTE: The messages can also be posted to your social media accounts.

Device Name: My SPOT X

Device Settings

Device Name My SPOT X
Tracking
Movement Alerts Enabled
Third Party GPS Forwarding Disabled
Duplicate Settings

Contact Settings

S.O.S.
My Contacts
SPOT S.O.V.
Social Media
Message Blocker

Message Profile Settings

Check In

Check In with friends and family by quickly sending a pre-programmed message and/or email along with your GPS coordinates to up to 10 contacts at no cost to you. The Check In message will include a link to Google Maps™ containing the SPOT X's location.

Check In messages will not be deducted from your plan's allotted messages. Incoming responses to Check In messages however will count as a regular received message and will be deducted from your plan's allotted messages.

Message to Send:

This is the default SPOT Check In message. Please update.

Send Messages To:


Twitter

[Add Email](#) [Add Mobile Number](#)

Save

EDITING AN EMAIL ADDRESS OR MOBILE NUMBER

1. In the Check In section, select **Edit** next to the email or mobile number to be edited and the **Edit the Mobile Number** or **Email Address** popup will be displayed.
2. In the Mobile Number or Email Address field, edit the information and click **OK**.

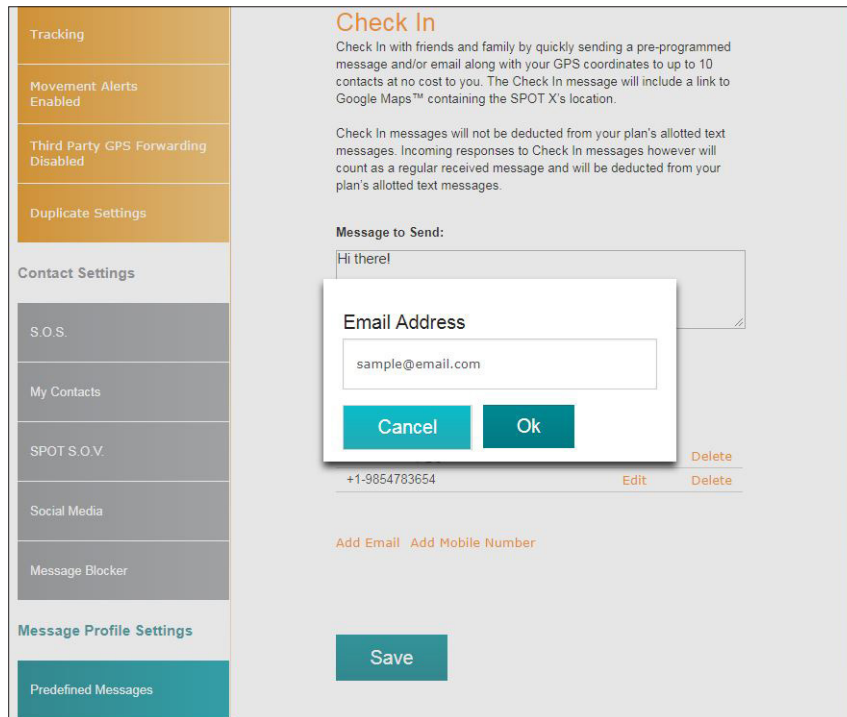

DELETING AN EMAIL ADDRESS OR MOBILE NUMBER

1. In the Check In, section, select **Delete** next to the **Email or Mobile number** to be removed.
2. Click **Save**.

UNDELIVERED MESSAGE NOTIFICATION TAB

If the SPOT X is turned off or has not communicated with the SPOT Satellite Network, incoming messages will not be delivered. All incoming messages will be queued for up to 72 hours from the time they were sent and will only be delivered if the SPOT X is turned on and has a satellite connection. If the SPOT X remains turned off, all queued messages will not be delivered and permanently deleted.

To receive these emails before they are deleted, select **Enable** and the messages will be delivered to the email address displayed.

To change the email address:

1. Select the email address field and enter a new email address.
2. Click **Save**.

Device Name
My SPOT X

Tracking

Movement Alerts
Enabled

Third Party GPS Forwarding
Disabled

Duplicate Settings

Contact Settings

S.O.S.

My Contacts

SPOT S.O.V.

Social Media

Message Blocker

Message Profile Settings

Predefined Messages

Check In

Undelivered Message Notification

Undelivered Message Notification

While SPOT X is powered off or has not communicated with the SPOT Satellite Network, incoming messages will not be delivered to your device. All incoming messages will be queued for up to 72 hours from the time they were sent and will only be delivered if your SPOT X device turns back on within that time period. After 72 hours, if the SPOT X device has not powered on, all queued messages will be deleted permanently and will not be delivered to your SPOT X device.

If you would like to be able to receive these messages via email prior to them being permanently deleted, please select the **Enable** button below. If you would like the messages to be sent to an email address other than the admin email address, please enter the new email address below and select **Save**.

Disable


sample@email.com



Save

WAYPOINTS TAB

The Waypoints tab is used to mark important locations or points of interest to navigate to using the SPOT X. Waypoints can easily be created and loaded on to the SPOT X.

CREATING A WAYPOINT:

1. Select  to enlarge the map screen.
2. Zoom to the specific area on the map where you want to create a waypoint for. Left click and the Create Waypoint popup will be displayed.
3. The Latitude, Longitude and Elevation will be displayed. In the Name field, enter a name for the Waypoint.
4. In the Notes field, enter any pertinent information.
5. Click **Save**.

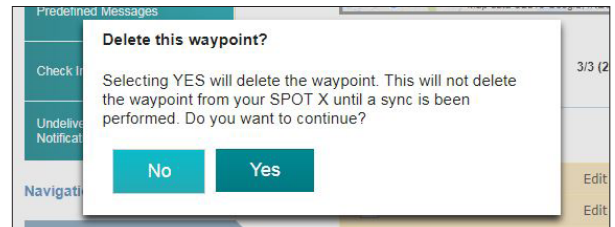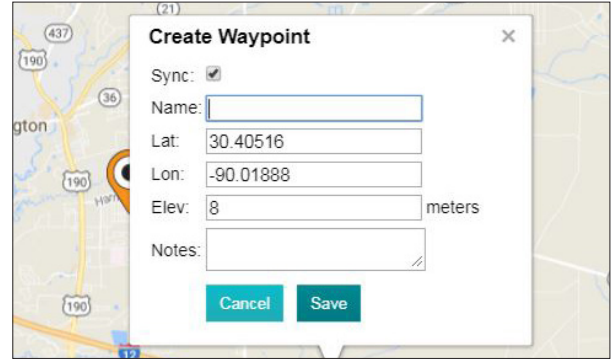


DELETING A WAYPOINT:

1. In the Waypoints section, Select **Delete** next to the waypoint and the Delete this Waypoint Message popup will be displayed.
2. Select **Yes** to Delete


EDITING A WAYPOINT:

1. In the Waypoints section, Select Edit next to the waypoint and the Edit Waypoint popup will be displayed.
2. Edit the information that needs to be changed.
3. Select Save.

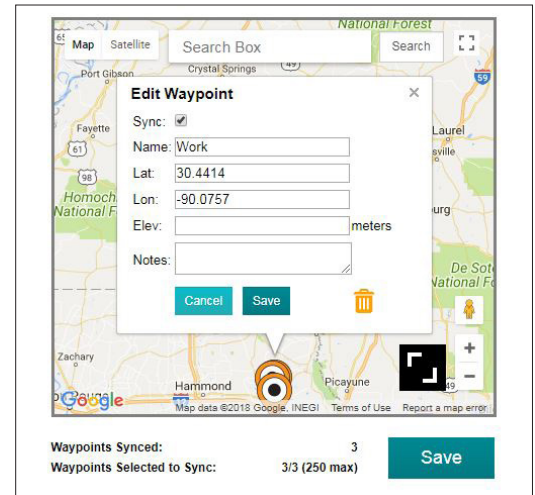

SYNCING WAYPOINTS TO THE SPOT X

1. In the Waypoints section, select Waypoints by clicking on the appropriate check box.
2. Select **Save** to save the Waypoints settings.
3. Sync the SPOT X with My Account.

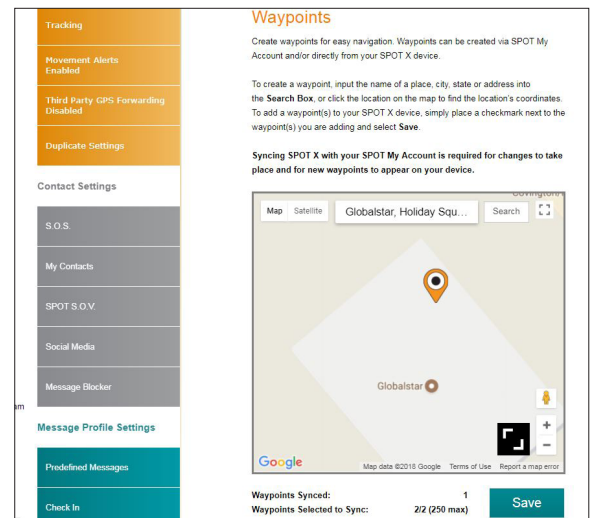

MY ACCOUNT – MY LOCATIONS

TRACKING

SPOT Tracking provides an easy way to share your outdoor adventures and is also a great safety feature. To view the tracks made while using the SPOT X, simply click on the My Locations tab.

The screenshot shows the 'My Locations' page in the SPOT web application. At the top, there's a navigation bar with 'Activate Your SPOT', 'My Account', and 'Help'. Below that, a secondary navigation bar includes 'Getting Started', 'My Devices', 'My Locations' (which is active), 'Share', and 'Settings & Billing'. The main area features a map with several location pins. Below the map, there are tabs for 'My Locations' and 'Tracking | Locate'. A 'Set Filters' section allows users to filter by 'Devices' and 'Message Type', with a date and time range selector. An 'Apply Filters' button is located to the right. Below the filters, there are action buttons: 'Map It', 'Hide', 'Unhide', 'Delete', and 'Download'. At the bottom, a table displays tracking data for three entries.

	TIME (U.S/PACIFIC)	SPOT DEVICE	TYPE	SENT TO	LATITUDE	LONGITUDE	ALTITUDE	STATUS
<input checked="" type="checkbox"/>	04/25/2018 02:17 PM	MY SPOT X	S.O.S. CANCEL		30.44152	-90.07584	17	
<input checked="" type="checkbox"/>	04/25/2018 02:08 PM	MY SPOT X	CUSTOM	15044006815	30.44145	-90.07586	8	
<input checked="" type="checkbox"/>	04/25/2018 02:00 PM	MY SPOT X	CHECK IN	NAMI.DOCKERY@GLOBAL STAR.COM, 15045138570	30.44153	-90.07586	14	

SET FILTERS

Devices – Select the devices you would like to display on the map.

Message Type – Select the type of message you want to see on the map such as Check In, New Movement and S.O.S.

Date and Time Range – Select the Start and End date of the tracks or message types to display on the map.

Apply Filters – Once the above filters have been set, the Apply Filters option will display on the map with the information requested.

Set Filters

Devices **Message Type** **Date and Time Range**

Select Device ▼ Select Message Type ▼

Start: 04/24/2018 07:00 pm End: 05/02/2018 06:59 pm

Apply Filters

Map It – Select the message type one by one or all to display them on the map.

Hide – Select one or more message types to hide it from Shared Page.

Unhide – Select this function to make the hidden message type visible on the Share Page.

Delete – Select this function to delete a message type from the map.

Download – Store your SPOT X's tracking information as a GPX, CSV or KML format.

Map It **Hide** **Unhide** **Delete** **Download**

<input type="checkbox"/>	TIME (US/PACIFIC)	SPOT DEVICE	TYPE	SENT TO	LATITUDE	LONGITUDE	ALTITUDE	STATUS
<input checked="" type="checkbox"/>	05/02/2018 05:51 AM	SPOT X MP	EXTREME TRACK		30.43254	-90.08669		
<input checked="" type="checkbox"/>	05/02/2018 05:49 AM	SPOT X MP	EXTREME TRACK		30.43251	-90.08667		
<input checked="" type="checkbox"/>	05/02/2018 05:46 AM	SPOT X MP	EXTREME TRACK		30.43235	-90.08615		
<input checked="" type="checkbox"/>	05/02/2018 05:43 AM	SPOT X MP	EXTREME TRACK		30.44077	-90.08307		
<input checked="" type="checkbox"/>	05/02/2018 05:40 AM	SPOT X MP	EXTREME TRACK		30.44389	-90.08438		
<input checked="" type="checkbox"/>	05/02/2018 05:37 AM	SPOT X MP	EXTREME TRACK		30.44718	-90.09088		
<input checked="" type="checkbox"/>	05/02/2018 05:32 AM	SPOT X MP	EXTREME TRACK		30.44436	-90.07742		
<input checked="" type="checkbox"/>	05/01/2018 03:54 PM	SPOT X MP	UNLIMITED TRACK		30.43309	-90.08694	14	

LOCATE

Find the last known location of the SPOT X by Selecting the Device, then click **Locate**.

The Last Known Reporting Interval is based on either the Tracking interval or Message Fetching rate set on each individual SPOT X device. Locating the SPOT X may take longer than the Last Known Reporting Interval due to several factors: the SPOT X is turned off or has not communicated with the SPOT Satellite Network, the SPOT X does not have a clear line of sight to the satellites, and/or reporting intervals may have been changed directly on the device.

My Locations **Tracking | Locate**

Locate Devices

Devices:


Filter:

DEVICE NAME	LAST KNOWN REPORTING INTERVAL	LAST KNOWN TIME/DATE	LAST KNOWN LATITUDE	LAST KNOWN LONGITUDE	LOCATED TIME/DATE	LOCATED LATITUDE	LOCATED LONGITUDE	STATUS
MY SPOT X	5 MIN	04/26/2018 12:14 PM	30.43311	-90.08694	LOCATING

MY ACCOUNT – SHARE

CREATE A SHARE PAGE

Share your messages and locations with friends, family and coworkers by creating a SPOT Share Page. Anyone with a link to your Share Page can see your GPS location and messages online in near real-time. Make your page public or private by password protecting it, and create or delete pages at any time. You can create up to 10 Share Pages per SPOT device. You have complete control on your SPOT Share Pages!

1. Click on the Share icon .
2. Click on Create a Share Page.
3. Enter the appropriate information and click **Create**.

Create a Share Page

Share your messages and locations with friends, family and coworkers by creating a SPOT Share Page. Anyone with a link to your Share Page can see your GPS location and messages online in near real-time. Make your page public or private by password protecting it, and create or delete pages at any time. You can create up to 10 Share Pages per SPOT device. You have complete control on your SPOT Share Pages!

Share Page Name: *

Devices to Share: * Select All

- My SPOT X
- SPOT X 2

Location Messages to Share: * Check In
 Custom
 Extreme Track
 Help
 New Movement
 Track
 Unlimited Track

Share GPS Locations from the Last:

Share Message Detail: Yes No

Security: Make Shared page public
 Make Shared page private

Notify family and friends about this share page.

Send a copy to you

To:

(Enter up to 50 email addresses, separated by commas.)

From:

Subject:

Write your email:

Hi,


I have a SPOT device. SPOT devices use satellite technology to allow people to share communicate and share GPS coordinates from virtually anywhere in the world. Click the link to locate my SPOT. Learn more about the SPOT product family at FindMeSPOT.com!

Just follow this link to see my location updates:
<<Actual link will be inserted here>>
If the link doesn't work, try copying and pasting it to your browser's address bar.

Thanks,
P.S. To learn more about the SPOT Satellite GPS Messenger, visit <http://www.findmespot.com>

CREATE A GET SPOTTED PAGE

Allow friends, family and coworkers to request your location by creating a Get Spotted Page. Make your page private by password protecting it, and create or delete pages at any time. Anyone with a private link to your Get Spotted Page can request your GPS location online in near real-time. You can create up to 10 Get Spotted Pages per SPOT device. You have complete control of on your Get Spotted pages!

1. Click on the Share icon .
2. Click on Create a Get Spotted Page.
3. Enter the appropriate information and click **Create**.

Create a Get Spotted Page

Allow friends, family and coworkers to request your location by creating a Get Spotted Page. Make your page private by password protecting it, and create or delete pages at any time. Anyone with a private link to your Get Spotted Page can request your GPS location online in near real-time. You can create up to 10 Get Spotted Pages per SPOT device. You have complete control of on your Get Spotted pages!

Get Spotted Page *
Name:

SPOT Location Finder: * Select All

My SPOT X
 SPOT X 2

Password: *

Notify family and friends about this Get Spotted Page.

MY ACCOUNT – SETTINGS & BILLING









OVERVIEW

The Settings & Billing page

- **Username Settings** – Select Update to change username.
- **Password Settings** – Select Update to change account password.
- **Time Zone Preference** – Select Update to select the time zone that will be displayed on all messages from the SPOT X.
- **Language Preference** – Select Update to change your preferred language.
- **Credit Card Information** – Select View/Edit to update or change credit card information.
- **Customer Information** – Select View/Edit to update primary contact information.
- **Monitor Message Usage** – Select View to display the current billing cycle SPOT X message usage.
- **Billing History** – Select View to see billing history/invoices and basic customer information.

Settings & Billing

Manage your account and billing settings.

GENERAL		BILLING	
Username Settings Update your account username. In order to update your username, you must first enter your current password and then enter the new username.		Credit Card Information To ensure there are no interruptions to your SPOT service, it is important to keep your credit card information up to date.	
Update		View/Edit	
Password Settings Update your account password. In order to update your password, you must first enter your current password and then enter your new password. Remember passwords are case sensitive.		Customer Information Use this page to update your primary contact information. This includes information provided to emergency services.	
Update		View/Edit	
Time Zone Preference Current Time Zone: (GMT-08:00) US/Pacific Please select the time zone that you would like to see on your messages. The default time zone preference is GMT.		Monitor Message Usage View your message usage per device.	
Update		View	
Language Preference Current Language: English Please select the preferred language in which you would like to receive your email communications and view your My Account page content.		Billing History View billing history and basic customer information.	
Update		View	

SPOT X MESSAGE USAGE

The SPOT X Message Usage section displays the following message usage information for the current billing period:

- **Device Name** – Displays the name of the SPOT X.
- **Text Used** – Displays the current total text messages (sent & received) used and the maximum number of text messages allowed before overages will be incurred.

Example: 35/50 where 35 is the current total of text messages used and 50 is the maximum number allowed before overages will be incurred.

- **Text Sent** – Displays the total free-form texts sent by the SPOT X.
- **Text Received** – Displays the total texts received by the SPOT X.
- **Predefined Sent** – Displays the total Predefined Messages sent by the SPOT X. Sending Predefined Messages are free and do not count as free-form text messages.
- **Text Overages** – Displays the total text messages (sent & received) that exceed the maximum number of text messages allowed by the SPOT X Service Plan.
- **Overage Total** – Displays the total cost of text messages that have exceeded the number of text messages allowed by the SPOT X Service Plan. The Overage Total will appear on your next invoice.
- **Next Billing Date** – Displays the date when the next billing cycle begins.


SPOT X Message Usage							
DEVICE NAME	TEXT USED	TEXT SENT	TEXT RECEIVED	PREDEFINED SENT	TEXT OVERAGES	OVERAGE TOTAL	NEXT BILLING DATE
MY SPOT X	0/UNLIMITED	0	0	0	0	\$0.00	05/03/2018
SPOT X 2	0/100	0	0	0	0	\$0.00	05/26/2018

[Back](#)

SYNCING SPOT X WITH MY ACCOUNT

To sync your SPOT X from My Account, visit [SPOT Firmware Updater](#) to download the latest firmware update.

1. Open the **Find Me SPOT** updater.
2. Log in with your My Account credentials.
3. Turn off your SPOT X.
4. Connect the USB cable to your SPOT X and plug into a USB port on your computer.
5. Click on **Connect**.
6. Click on **Sync**.
7. Once the Sync is finished, click **Disconnect**.

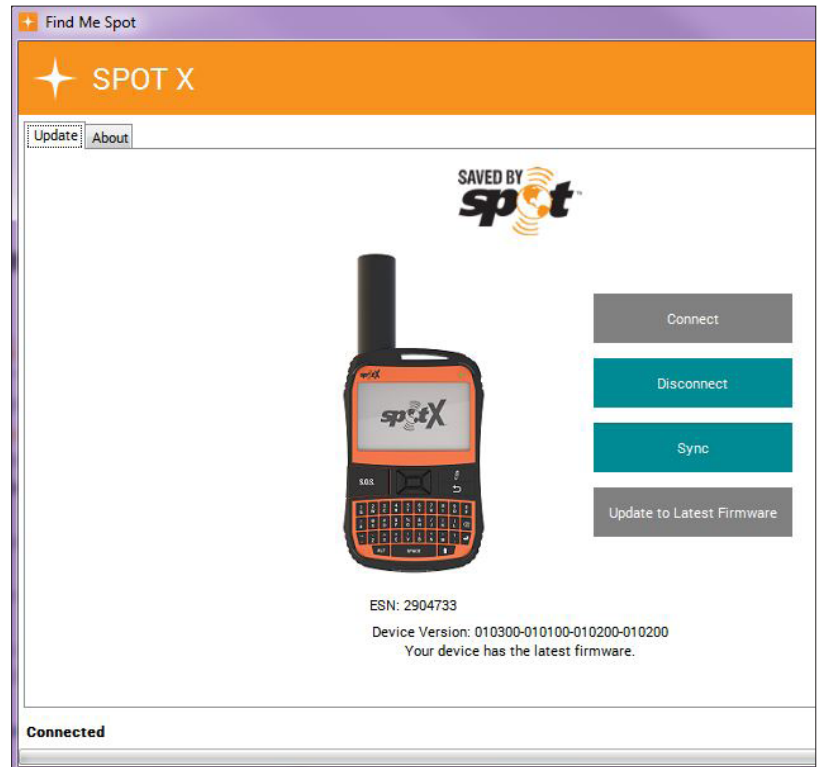

SPOT X FIRMWARE UPDATE

To perform an update on your SPOT X, visit [SPOT Firmware updater](#) to download the latest updater.

1. Open the Find Me Spot updater.
2. Log in with your My Account credentials.
3. Turn off your SPOT X.
4. Connect the USB cable to your SPOT X and plug it to a USB port on your computer.
5. Click on **Connect**.
6. Click on **Update to Latest Firmware**.
7. Once the Update is finished, click **Disconnect**.

SPOT X SPECIFICATIONS

HEIGHT	6.54"
WIDTH	2.9"
THICKNESS	0.94"
WEIGHT	7.0 oz
BATTERY TYPE	Rechargeable Lithium Polymer Battery
WATERPROOF RATING	IP67 – Tested for submersion in 1 meter of water for 30 minutes
IMPACT RESISTANCE	Mil-STD-810G for shock, IP67 for dust
OPERATIONAL TEMPERATURE	-4° F to 140° F (-20° C to +60° C)
STORAGE TEMPERATURE	-4° F to 140° F (-20° C to +60° C)
OPERATING ALTITUDE	-328 ft to 21,320 ft (-100 m to 6,500 m)

CERTIFICATIONS

FCC COMPLIANCE STATEMENT

FCC Interference Statement (Part 15.1059b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC REGULATORY

FCC ID: L2V-SPOTX

FCC regulatory information is accessible on the SPOTX (e-label). The steps to access the information is as follows:

- From the main (home) screen, click on **System Settings**
- From the System Settings screen, Click on **Regulatory Info**
- The regulatory screen appears with FCC and Canada regulatory information.

RÉGLEMENTATION DE LA FCC:

FCC ID: L2V-SPOTX

Les informations réglementaires de la FCC sont accessibles sur le SPOTX (étiquette électronique). Veuillez suivre les étapes suivantes pour accéder à ces informations :

- Sur l'écran principal, cliquez sur Configurations du système.
- Sur l'écran de Configurations du système, cliquez sur Informations réglementaires.
- L'écran de réglementation apparaît avec les informations réglementaires de la FCC, et celles du Canada.

ISED RSS-GEN NOTICE

(1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

(1) l'appareil ne doit pas produire de brouillage; (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

INDUSTRY CANADA CERTIFICATION

This Class B digital apparatus complies with Canadian ICES-003.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

CANADA REGULATORY

IC: 3989A-SPOTX

CAN ICES-3(B)/NMB-3B

Canadian regulatory information is accessible on the SPOTX (e-label). The steps to access the information is as follows:

- From the main (home) screen, click on System Settings
- From the System Settings screen, Click on Regulatory Info
- The regulatory screen appears with FCC and Canada regulatory information.

RÉGLEMENTATION DU CANADA :

IC: 3989A-SPOTX

CAN ICES-3(B)/NMB-3B

Les informations réglementaires du Canada sont accessibles sur le SPOTX (étiquette électronique). Veuillez suivre les étapes suivantes pour accéder à ces informations :

- Sur l'écran principal, cliquez sur Configurations du système.
- Sur l'écran de Configurations du système, cliquez sur Informations réglementaires.
- L'écran de réglementation apparaît avec les informations réglementaires de la FCC, et celles du Canada.

DECLARATION OF CONFORMITY FOR EUROPEAN CUSTOMERS

Hereby, SPOT LLC declares that this SPOT X, is in compliance with the Directive 2014/53/EU. The full text of the EU Declaration of Conformity may be consulted at **FindMeSPOT.com/Regulatory**.











Transmit frequencies: 1611.25, 1613.75, 1616.25 and 1618.75 MHz. (1610-1620 MHz)

Maximum EIRP: 22.35 dB

This device complies with the requirements for Radio Astronomy Site avoidance as specified by the Globalstar National Science Foundation agreement of 2001. It is compliant with CFR25.213.

This device automatically adjusts its transmission frequency according to its location and is compliant with international regulatory requirements.

GENERAL WARNINGS

-  **Warning – Modifications:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
-  **Warning – Internal Battery:** The rechargeable battery inside the SPOT X is not designed to be replaced by the consumer. If replacement is needed, have an authorized service person replace the battery with one of the same size and type.
-  **Warning – Blasting Area:** To avoid interference with blasting operations, turn your SPOT X off when in a “Blasting Area” or in areas posted “Turn off two-way radio.” Obey all signs and instructions.
-  **Warning – Potential Explosive Atmosphere:** Turn off the SPOT X when in any area with a potentially explosive atmosphere and obey all signs and instructions.
-  **Warning – Driving:** Always follow safe driving practices and local rules and regulations regarding the use of wireless devices while driving. Always park safely prior to sending or using the SPOT X.
-  **Warning – Pacemakers:** The Health Industry Manufacturers Association recommends that a minimum separation of six (6”) inches be maintained between the SPOT X and a pacemaker to avoid potential interference with the pacemaker.
-  **Warning – Pacemakers:** Some digital wireless devices may interfere with some hearing aids. In order to prevent such interference, you may want to consult the manufacturer of your hearing aid.
-  **Warning - Specific Absorption Rate (SAR):** The SPOT X has been shown to be compliant to localized Specific Absorption Rate (SAR) for uncontrolled environment/ general exposure limits specified in ANSI/IEEE STD C95.1-1992 and has been tested in accordance with measurement procedure specified in IEEE 1528-2013 and IEC 62209- 2.2010 using a separation distance of 0mm. The SPOT X should be operated in accordance with provided instructions for human exposure.

ADDITIONAL SPOT X SUPPORT

This SPOT X User Guide is based on the production version of SPOT X. Hardware and firmware changes may have occurred after this release. SPOT LLC reserves the right to make changes to technical and product specifications without prior notice.

Visit FindMeSPOT.com/SPOTXSupport to access the latest version of the SPOT X User Guide and for additional information on how to use SPOT X.



FindMeSPOT.com/SPOTX

SPOT X™ is a trademark of Globalstar Inc.
Google Maps™ is a trademark of Google® Incorporated.

All other trademarks and registered trademarks are properties of their respective owners.

© 2018 SPOT LLC. All Rights Reserved. All SPOT products described on FindMeSPOT.com are the products of SPOT LLC and its affiliates, which are not affiliated in any manner with SPOT Image of Toulouse, France or SPOT Image Corporation of Chantilly, Virginia.

SPOT LLC • 300 Holiday Square Blvd. • Covington, LA 70433